



**RL32 32-CHANNEL UNIVERSAL RADIO
LOGGER**

INSTALLATION & OPERATION INSTRUCTIONS

Author: John Moyce

Number of Pages: 46

SHM Communications Ltd., Valley House, Winnall Valley Road, Winchester, Hampshire SO23 0LD

Tel 01962 865142 Fax 01962 862451

Copyright © SHM Communications Ltd. 2009
_OUT_SHM.DOT

AMENDMENT RECORD

Date	Issue	Amended By	Comment
24/06/05	1A	J.J.Moyce	Original
26/07/05	1B	J.J.Moyce	Additional information
16/08/05	1C	J.J.Moyce	Modify Fig 3, remove "Provisional" & minor corrections.
21/09/05	1D	J.J.Moyce	Correct connection info in section 3.2.1.2
09/07/09	1E	J.J.Moyce	Added WEEE information

TABLE OF CONTENTS

1.	INTRODUCTION.....	5
1.1	Overview.....	5
1.1.1	Radio Channel Operation.....	6
1.2	Safety Warning.....	7
1.3	Electromagnetic Compatibility (EMC).....	7
1.4	Disposal (WEEE).....	7
1.4.1	Battery Disposal.....	7
2.	INSTALLATION.....	9
2.1	Siting.....	9
2.1.1	Logger.....	9
2.1.2	RF Receiver.....	9
2.1.3	RF Transmitters.....	10
2.2	Fixing.....	10
2.3	Wiring.....	13
2.3.1	Mains.....	15
2.3.2	Inputs.....	15
2.3.3	Telephone.....	16
2.3.4	Network (RS485 Option).....	16
2.3.5	Cable Types.....	19
3.	COMMISSIONING.....	20
3.1	Initial Checks.....	20
3.2	Configuring using UCOMM.....	20
3.2.1	Configuring Radio-Link Channels.....	21
3.2.1.1	Using UCOMM.....	21
3.2.1.2	Using RLConf.....	22
3.3	Verification.....	23
4.	DESCRIPTION.....	24
4.1	Indicators.....	24
4.1.1	Logger Unit.....	24
4.1.2	Radio Receiver Unit.....	24
4.2	Connectors.....	24
4.2.1	Logger Unit.....	24
4.2.2	Radio Receiver Unit.....	29
4.3	Fuse.....	29
4.4	Batteries.....	30
4.4.1	Main Battery.....	30
4.4.2	Memory Battery.....	30
4.5	Configuration Links.....	30
4.5.1	Input Configuration.....	30

RL32 Installation & Operation Instructions

4.5.2	RS485 Option Board Configuration	31
4.5.3	Expansion Board Configuration.....	32
4.5.4	Radio Receiver Configuration	32
5.	OPTIONS	33
5.1	Hardware Options	33
5.1.1	Modems	33
5.1.1.1	Integral BT Modem	33
5.1.1.2	External Modems	33
5.1.2	RS485 Option Board	34
5.1.3	Modem Serial Switch Option Board	34
5.2	Software Options	34
5.2.1	Modem Answer Window	35
5.2.2	Dial In	35
5.2.3	Alarms	35
5.2.3.1	Non-Latched Alarms	37
5.2.3.2	Latched Alarms.....	37
6.	MAINTENANCE	38
6.1	Removing the Sub-Chassis.....	38
6.2	Battery Life.....	38
6.3	Battery Replacement.....	38
7.	TECHNICAL SPECIFICATION	39
7.1	Logging Unit.....	39
7.1.1	Inputs.....	39
7.1.2	Channels.....	40
7.1.3	Isolation	41
7.1.4	Communications	41
7.1.5	Time/Date	41
7.1.6	Security.....	42
7.1.7	Electrical	42
7.1.8	Wiring	42
7.1.9	Enclosure	43
7.2	Radio Receiver Unit.....	44
7.2.1	Enclosure	44
7.2.2	Electrical	44
7.2.3	RF	44
8.	SPECIFIC TOPICS FOR RADIO CHANNELS.....	45
8.1	Timeouts and Delays.....	45
8.2	Digital Channels	45
8.3	Analog Channels	46
8.4	Troubleshooting.....	46

1. INTRODUCTION

This document describes the installation, commissioning, operation and maintenance of the RL32 32-channel logger. All hardware aspects are covered in detail but the software aspects of commissioning and operation are only covered as an overview.

1.1 Overview

The RL32 logger provides secure reliable logging of digital and analog inputs. It has 8 Universal Channels and 24 radio-link channels.

The logger's associated radio receiver picks up radio transmissions from up to 24 special radio transmitters and stores the readings in the logger. Several different types of radio transmitter are available, for example :-

- Single pulse-counting digital transmitter
- Dual pulse-counting digital transmitter
- Temperature transmitter

Radio-link channels can be either digital, temperature or analog, depending on the type of the corresponding transmitter.

Radio-link channels are very useful where providing a direct cable connection to the meter or sensor would be expensive or inconvenient. In addition, radio channels are often used in the following situations :-

- **Water Meters** The Transmitter units are sealed to better than IP68 and fully encapsulated, making them ideal for use within water meter pits. The transmitted signal is able to pass out of most meter pits (even when a metal manhole cover is present), but at reduced signal strength.
- **Gas Meters** ATEX certified intrinsically safe transmitters are available for use in hazardous areas. These are ideal for connections to gas or oil meters and avoid the use of barrier relays.
- **Temperature Monitoring** Transmitters with an integral temperature sensor are available. These are ideal for monitoring internal and external temperatures, which is essential for tracking the energy efficiency of a building.

Each Universal Input can be configured using a jumper link to suit the type of input to be measured (contact closure, voltage, current or thermistor). The logger channels can be programmed to interpret these inputs as analog or digital quantities. Alternatively the logger can monitor the state of a digital input and store the time and date of any changes of state (on-to-off or off-to-on).

Digital channels normally count pulses generated by volt-free contact closures and store the number of pulses recorded over a configurable time interval (typically every 30 minutes).

Analog channels measure the analog value of a current or voltage input by sampling it once per second and averaging it over 1 minute.

Temperature channels are a special type of analog channel that measure the resistance of a thermistor and convert it to an equivalent temperature using a linearization algorithm. Contact SHM for compatible thermistor sensor units.

The logger is mains powered but the logged data is kept in non-volatile (battery supported) storage so that logged readings are maintained while the mains power is off. The logger can be supplied with a UPS (Un-interruptible Power Supply) that allows data to be logged for several hours without mains power.

The logger can provide security of data with 4 levels of passwords, but for applications that do not require this, the logger can be programmed to operate without passwords.

The logger is fully configurable in terms of channel type, logging interval, channel size and security, and can also be configured to generate channel alarms.

The Universal Channels can be configured independently, but certain configuration parameters of the Radio-Link channels are common to all 24 of these channels (see section [3.2.1]).

The logger has a number of communications options, including an integral telephone modem and an RS485 network. The RS485 network allows a number of inter-linked loggers to be interrogated from a central point or via a single modem connection. The RL32 logger is fully compatible with other SHM loggers (eg. the UL8 Universal 8-channel logger and the DL4 Digital 4-channel logger) and these loggers can be networked in any combination.

All SHM loggers communicate using the same efficient reliable real-time protocol.

There are a number of software applications that can communicate with SHM loggers :-

- Stark RT (Windows). This is a full-function real time energy monitoring and reporting suite that will collect data automatically from SHM loggers and provide comprehensive analysis of the data.
- UREAD (DOS & Windows). This is a utility that can collect data locally from an SHM logger and store the data in a file for subsequent import into Stark RT. It is designed for use if the communications link to a logger is temporarily unavailable.
- UCSV (DOS & Windows). This utility collects data from an SHM logger and stores it as a Comma-Separated-Value (CSV) file that can be imported into database and spreadsheet programs (eg. Microsoft Excel).
- UCOMM (DOS & Windows). This utility is required to commission and configure an SHM logger. If SHM carry out the commissioning of the logger on site, the user may not need this utility, unless there is a requirement to alter the configuration subsequently.

1.1.1 Radio Channel Operation

A Radio Logger System consists of several parts :-

- A central logger unit that stores channel data in memory at regular intervals and handles communications with the host PC running the Energy Management System software.
- A receiver unit, normally adjacent to the logger unit, that receives radio transmissions and relays them to the logger unit. It connects to the logger unit via a single power/data cable.

- From 1 to 24 remote transmitter units. These are located adjacent to the meter or sensor being monitored. They transmit the meter/sensor data to the receiver unit at random intervals with an average frequency of approximately every 30 seconds. These devices are self-contained with their own battery supply.
- For situations where a transmitter unit is out of radio range of the receiver, one or more radio repeater units can be placed so as to bridge the gap between transmitter and receiver.

When the logger stores the data from a radio channel, it stores the last value received, which may be up to 30 seconds out-of-date. This small latency is normally insignificant.

1.2 Safety Warning

The installation of the Logger requires connection to hazardous voltages, and should only be undertaken by suitably qualified personnel. The main circuit board has exposed voltages at mains live potential.

An earth strap is supplied with every unit, connecting the three metal parts of the enclosure (base plate, lid and sub-chassis). A separate lead must be used to connect the enclosure to the supply earth. Spare M4 studs are provided on the base plate for this purpose.

The equipment should be connected to the supply earth at terminal E of terminal block TB1.

Always ensure that the equipment is installed with the above earthing arrangements in place.

1.3 Electromagnetic Compatibility (EMC)

To comply with EMC regulations, the RL32 should be installed with regard to minimizing interference to any sensitive equipment nearby.

The use of screened cables ensures minimal RF interference and also reduces the susceptibility of the system to external interference.

When using screened cable, the screen should be earthed at the logger end on one of the earthing studs provided, and with as short a tail as possible. The length of the un-screened conductors as they emerge from the screen to the terminal block should also be kept as short as possible.

In certain circumstances, un-screened cables (eg. multi-pair 'telephone' type cable) may work satisfactorily. In these cases the cable runs should be short, and should not run alongside high-current power supply cabling. However, if in doubt, screened cabling should be used.

1.4 Disposal (WEEE)



In the European Union, this symbol indicates that this product is not to be disposed of with household waste, according to the WEEE Directive (2002/96/EC). This product should be deposited at an appropriate facility to enable recovery and recycling. For more information about disposal of waste electronic equipment, contact your local waste authority, approved WEEE scheme or household waste disposal service.

1.4.1 Battery Disposal



Caution. Do not dispose of the batteries in a fire or with household waste. Contact your local waste disposal agency for the address of the nearest battery disposal site.

2. INSTALLATION

Because the electronics assembly is on a separate sub-chassis, and because all connections to it are pluggable, it is possible to install the enclosure and all the wiring first (without the electronics), and then fit the sub-chassis afterwards. This prevents damage to the electronics from dust, debris etc. A dummy sub-chassis, fitted only with the headers for the plug-in connectors, is available to facilitate this approach.

2.1 Siting

2.1.1 Logger

The logger should be sited with regard to the length of cabling required, the proximity to a telephone socket (if required) and the availability of a mains supply.

If the logger is monitoring pulse outputs from meters, quite long cable runs from logger to meter are permissible. Hence proximity to the meters need not be an issue, particularly if a site is already wired with a multi-pair cable network.

If the logger is monitoring analog or temperature inputs, it should ideally be mounted close to the sensors. However, if screened cables are used, runs of several hundred metres should be possible.

The optional integral modem is supplied with a 3 metre cable. If possible the logger should be sited within 2m of a BT telephone socket.

If the logger is to communicate directly with a PC (rather than via a modem) then the logger should ideally be sited less than 15m from the PC. In situations where this is not possible, an RS485 link (this is an option that must be ordered) can be used, allowing PC to logger distances of up to 1500m.

The logger should also be reasonably close to a mains supply, either a switched fused spur (preferable) or a 13A socket.

In addition, the minimum clearances specified in Figure [1] should be observed, otherwise access to the cable-entry glands and local interrogation socket will be difficult.

2.1.2 RF Receiver

The RF receiver unit is separate to the logger and should be situated with regard to the best RF reception.

Normally SHM or one of its trained agents would carry out an RF survey of the site beforehand to determine the optimum positioning of the receiver and transmitters to provide the greatest signal strength. Where a particular transmitter is out of range of the receiver, one or more repeaters can be used to bridge the gap.

The 4-way signal/power cable between logger and receiver unit must be screened and can be up to 100m long.

The receiver is normally supplied with its own antenna, but if required it can be ordered with a socket for connection to an external antenna fed via low-loss UHF coaxial cable, for situations where the receiver cannot be positioned for optimum RF reception.

2.1.3 RF Transmitters

The transmitter units are self-contained and fully encapsulated to better than IP68 with a built-in battery. They are normally supplied with a 1m lead, but can be supplied with longer leads on request.

For maximum transmission range, the antenna should point upwards, and should be kept clear of metallic surfaces (manhole covers, ducting and pipes). If this is not practicable, the unit can be mounted horizontally with only a small loss in transmission range. Generally the higher up the unit is mounted, the better.

Provision is made for mounting the transmitter using cable ties to attach it to a horizontal or vertical pipe. If possible, avoid mounting on metal pipes parallel to the antenna. Also avoid mounting on hot water pipes, as the heat will be conducted to the unit and impair the battery life.

It is often possible to install a transmitter in a water meter pit beneath a metal manhole cover and still be able to receive the signal above ground (although the transmit range may be limited).

2.2 Fixing

The logger lid must first be removed before fixing the logger to the wall as follows :-

The first step is to release the knurled knob on the bottom face of the logger (NB. This is a captive fixing), as shown in Step 1 of Figure [2].

Next lift the lower edge of the lid until the flange **A** is clear of the bottom face of logger (about 20 mm), as shown in Step 2 of Figure [2].

Then pull the lid down until its upper edge is free of the top flange **C**, as shown in Step 3 of Figure [2]. It may be necessary to lift the lid further to allow it to disengage from the LED indicators.

NB. Keep hold of the lid, as it will still be connected to the rest of the logger by the earthing strap. Pull off the spade connector to disconnect the earth strap and finally free the lid.

Replacement is the reverse of the removal procedure. Ensure that the sides of the lid engage *inside* the flanges (marked **B** in Figure [2]) at each side of the base plate. The lid should be slid upwards until the LED indicators engage in their holes in the lid. Also ensure that the top flange **C** engages correctly with the metal strip on the underside of the lid. Remember to re-connect the earthing strap.

The logger base plate is fixed to the wall by three screws. The upper fixing hole is keyhole-shaped, so it is not necessary to remove the logger sub-chassis to fix the unit. The base plate can be hooked over this screw first, and then secured through the remaining two fixing holes.

The fixing holes can either be pre-drilled using the dimensions given in Figure [1], or the upper screw can be put in and the other two positions marked using the base plate as a template.

Fixing screws may be up to 5 mm diameter.

NB. Ensure sufficient clearance below the logger for cable entry via the conduit connectors, and for the RS232 connection.

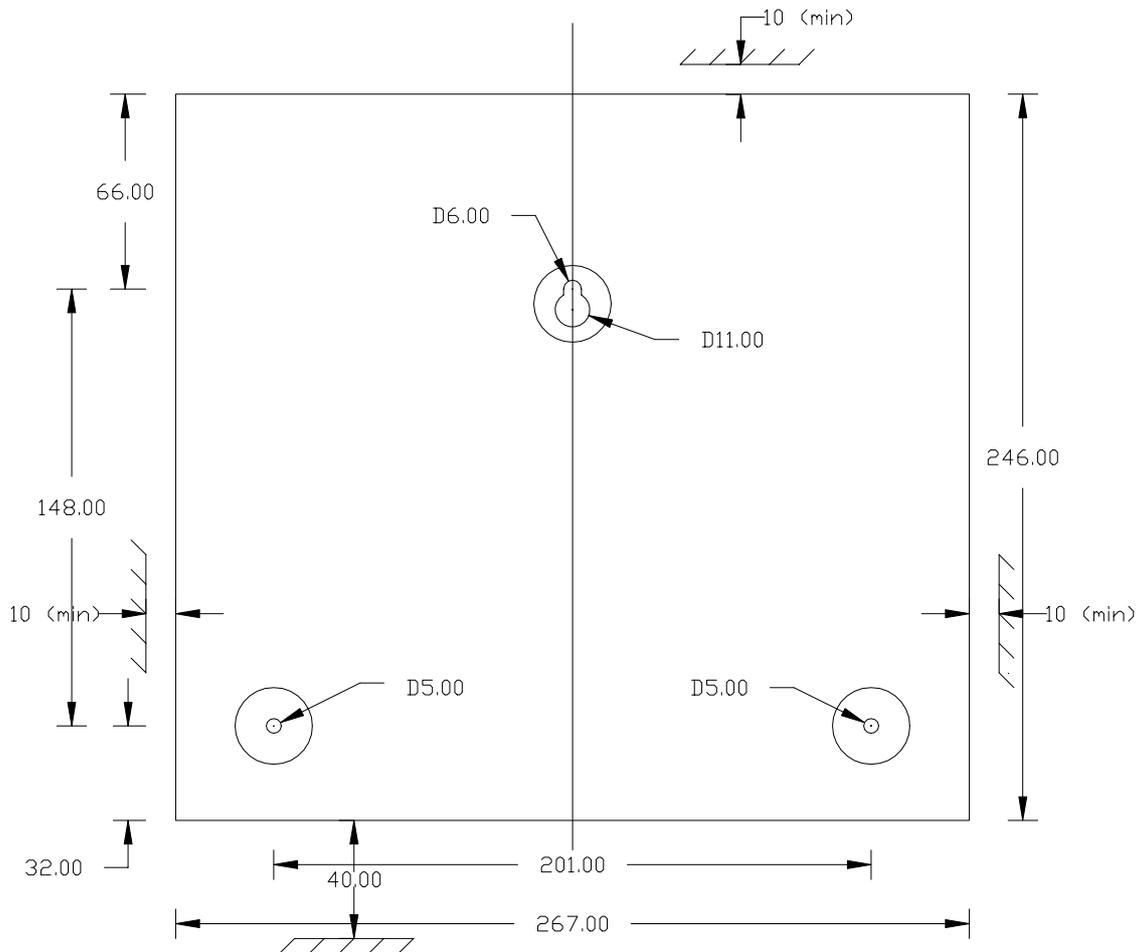


Figure 1 - Fixing Hole Dimensions

All dimensions in millimetres.

Ensure minimum clearances around enclosure are observed.

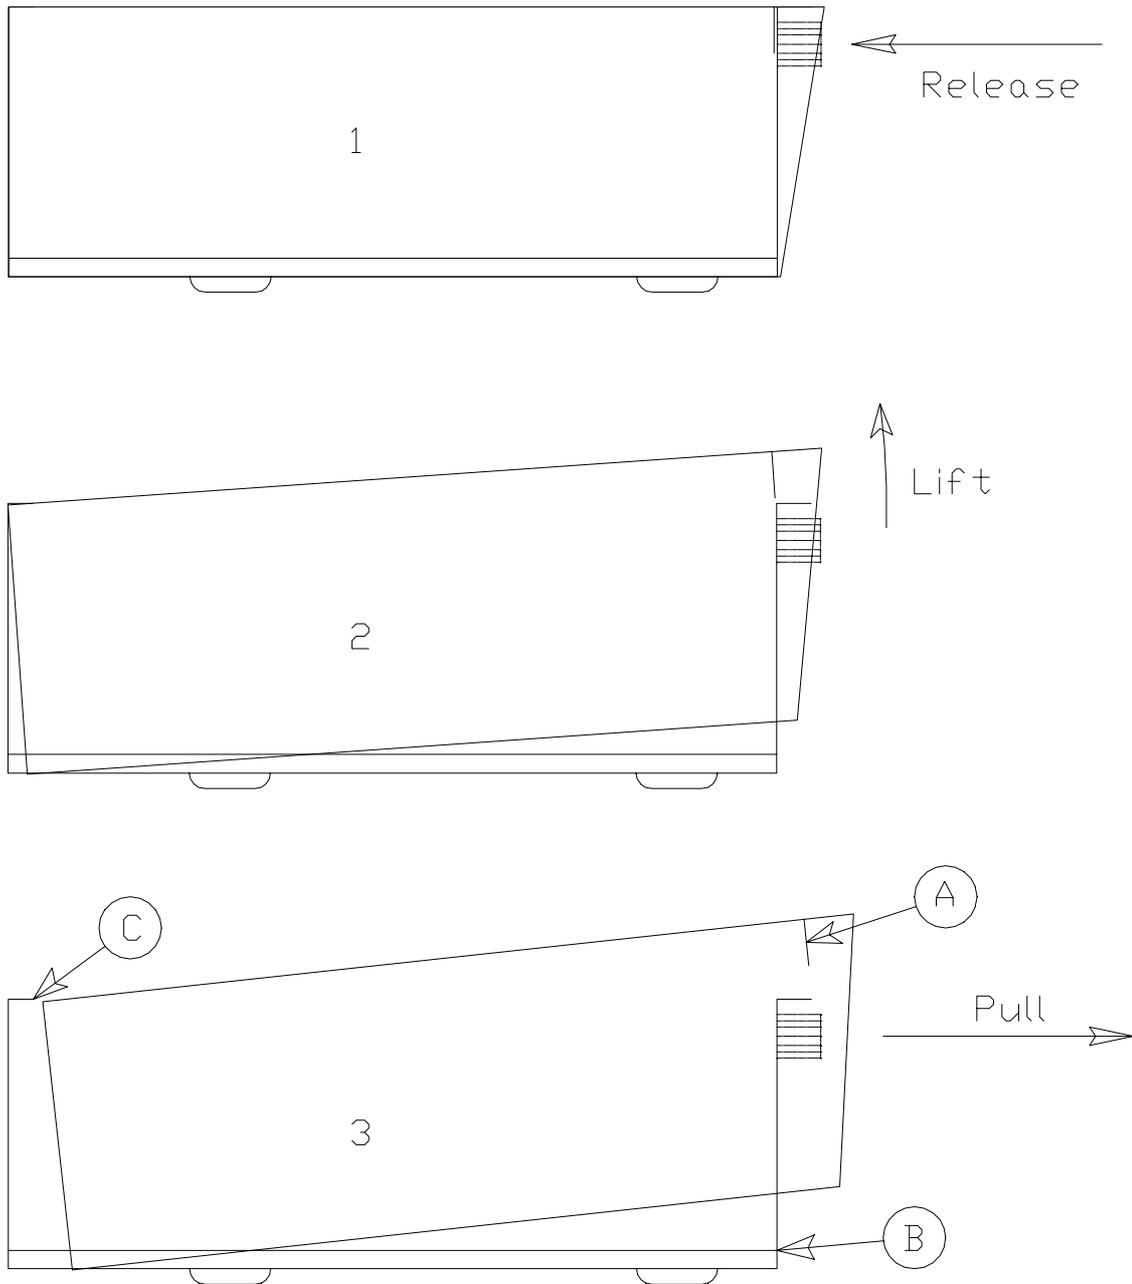


Figure 2 - Removing the Lid

2.3 Wiring

All cabling must enter the logger through the enclosure base via the bottom flange or the rear of the base-plate. Eight 20 mm diameter knock-outs are provided on the bottom flange and four on the rear. These are easily removed by using a screwdriver to lever them out. These holes are designed to take conduit fittings if required.

All connections to the logger circuitry are plug-in. The mains power and input connections use plug-in terminal blocks. These terminal blocks are normally of the screw-fixing type, but 'cage clamp' terminal blocks can be supplied as an option.

If the logger is to be commissioned at a later date, the mains and input connections can be left unplugged if desired.

NB. Refer to the safety warning in section [1.2]. It is important that the 'E' terminal of TB1 is earthed to both the supply earth and the enclosure.

NB. In the above figure, holes marked 'A' are for the screws that fix the PCB to the sub-chassis. Holes marked 'B' are for the pillars that are used to mount the Radio Frequency Interface Module. Holes marked 'C' are used for both purposes.

2.3.1 Mains

This connects via the 3-way terminal block TB1. The mains Live, Neutral and Earth connections are labelled **L**, **N** and **E** respectively. TB1 is a 2-part plug-in terminal block.

Typical power taken will not exceed 3 Watts and a supply spur fused at 3A is recommended.

SW1 is the Mains Voltage Selector. This is marked 240 and 120. Ensure that its setting matches the nominal mains input voltage at TB1.

Screened mains cable is recommended. Both the screen and the earth wire should be wired to the **E** terminal of the terminal block.

The screened mains cable should be passed through the ferrite ring supplied with each logger to provide additional RF filtering.

2.3.2 Inputs

The 8 Universal Inputs connect via the 18-way terminal block TB2. The inputs are marked **1** to **8**, and the common earth terminals are marked '-'. The right-hand 2 terminals (marked **+** and **-**) provide an unregulated DC voltage supply. TB2 is a 2-part plug-in terminal block.

The Radio Frequency Interface Module interfaces with the receiver via TB4 (signal) and TB5 (power). The receiver provides data for up to 24 additional logger channels.

Screened "Twisted Pair" cables are preferred for wiring up the inputs. A screened multi-core cable is a suitable alternative. Unscreened cable may be suitable for some installations.

It is not necessary to use large-diameter cables, as the current taken by the inputs is very small.

The screen or screens of the input cables should be wired to one of the earth posts on the baseplate. The length of the tail from the screen to the earth tag should be kept as short as possible (less than 5 cm).

Cable runs of up to 1000m should be possible. With long runs, thicker cable may be needed to minimize the cable resistance.

The following diagram shows how to connect various devices to the logger. Note that for the volt-free contact and thermistor, the polarity of the connection does not matter. However, for all other input sources, the correct polarity must be observed.

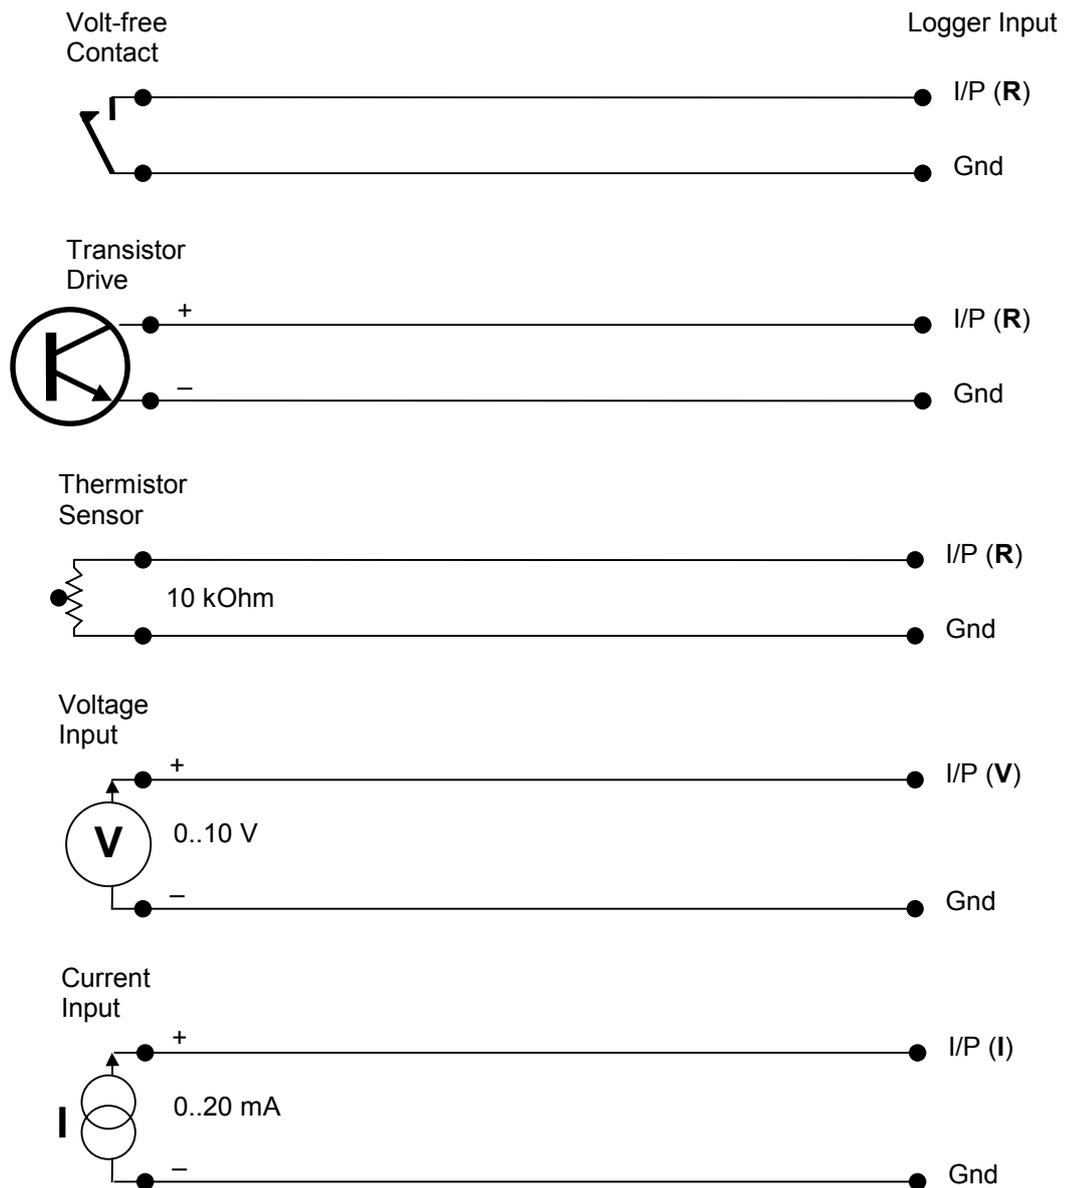


Figure 4 - Input Connection Circuit

2.3.3 Telephone

If the optional integral modem is fitted, it will be located on the underside of the sub-chassis. The modem has an RJ12 socket on the front for connection to the telephone line. A 3m lead with an RJ12 plug on one end and a standard BT 431A plug on the other is provided with the modem. If a longer lead is required, the one provided can be extended with a normal telephone extension lead.

2.3.4 Network (RS485 Option)

This is a card that plugs into one of the option positions (left or right - usually right). It allows a number of loggers to be connected up in a chain, using a 2-wire plus earth cable between each logger.

The Network connects via the 6-way 2-part plug-in terminal block on the card. The inputs are marked **RX +** and **-**, the outputs are marked **TX +** and **-** and the common earth terminals are marked **TX 0** and **RX 0**.

The network uses RS485 signalling, which is a physical link standard for communicating serial data over long distances ('long range RS232').

Screened "Twisted Pair" cables are strongly recommended for wiring up the RS485 network. The RS485 network is actually a chain, with the **TX+** and **TX-** of one logger connected to the **RX+** and **RX-** inputs respectively of the next logger in the chain.

The screen of the network cables should be wired to the common earth terminals on the connector. The length of the tail from the screen should be kept as short as possible (less than 5 cm). Cable runs of up to 1500m should be possible.

The following diagrams show the different ways of connecting up loggers using the RS485 interface. Note that in all cases, the correct polarity of the Receive and Transmit signals **must** be observed.

NB If connecting to the logger network at RS232 levels (eg. PC or external modem), then connection should be via the 6-way plug on the RS485 network card (see section [4.5.2]). The set-up is then similar to Figure [5].

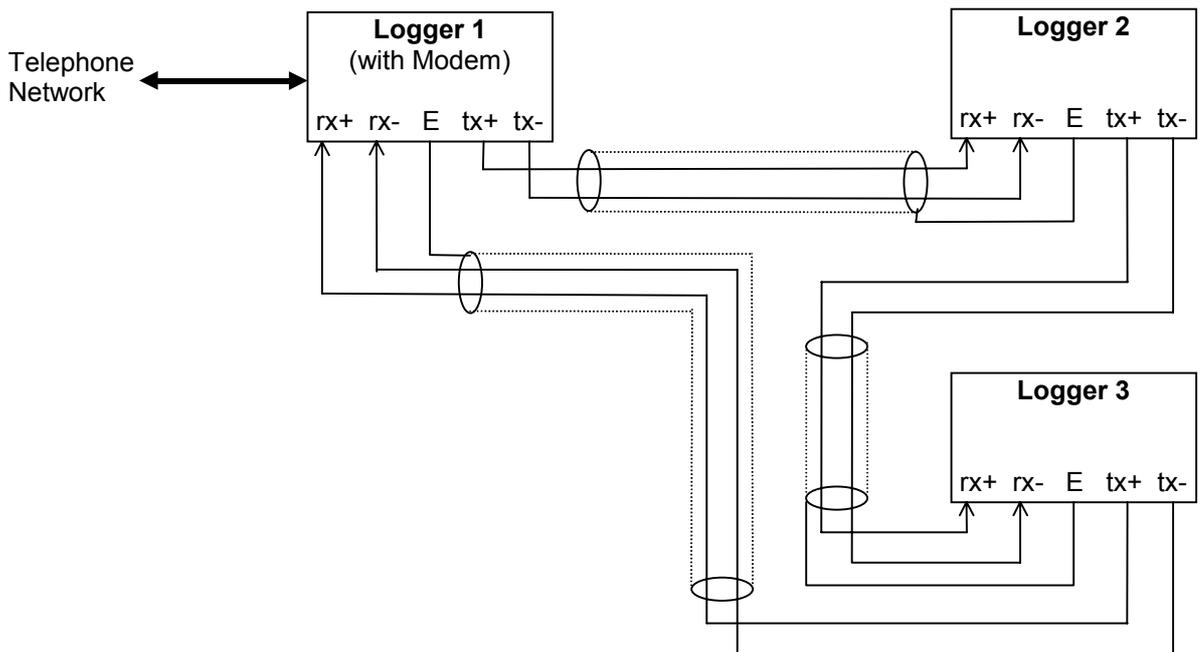


Figure 5 - RS485 Network interrogated via a modem

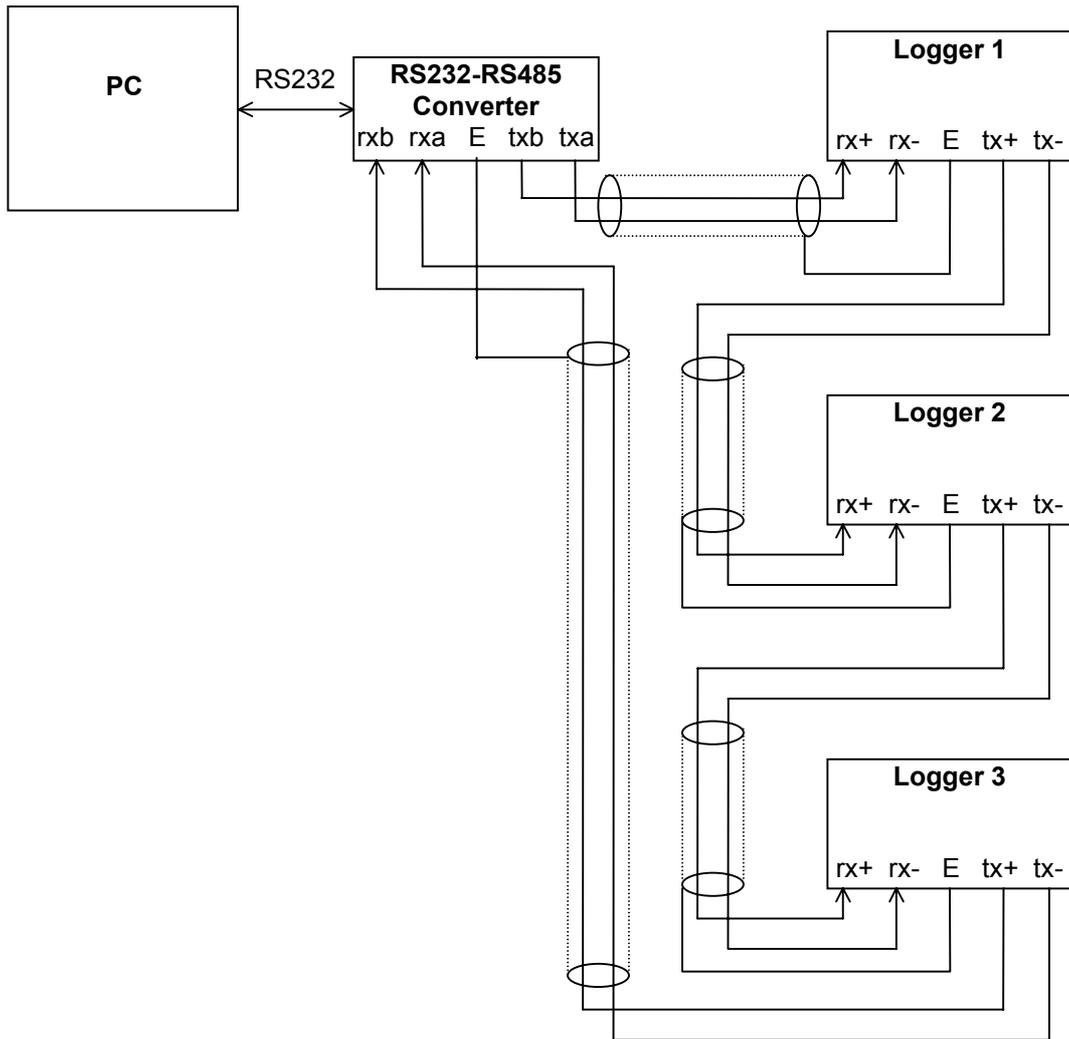


Figure 6 - RS485 Network directly connected to PC

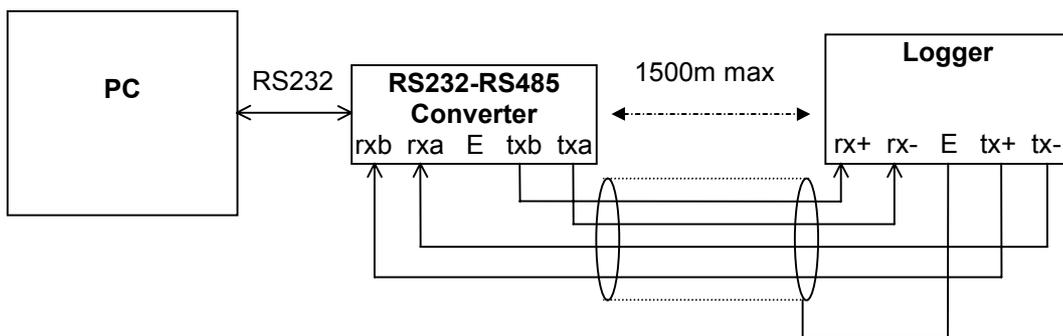


Figure 7 - Single Logger - Direct (long distance) connection to PC

2.3.5 Cable Types

Screened cables are recommended for all external connections for the logger. Apart from that, the type of cable used is not critical, and the terminal blocks will accept a wide range of types and sizes. However, for users requiring examples of suitable cables, the following table gives details of some specific types.

Mains Cables	Conduit cables (single wire)	24/0.2 (0.75 mm ²) Tri-Rated (BS6231, CSA TEW, UL 1015) (Eg. RS 364-354)
	3-core cable (Screened)	24/0.2 (0.75 mm ²) (Screened) (Eg. RS 363-367)
Pulse / Status Inputs	Single Twisted-Pair (Screened)	7/0.254 (22 AWG) (Eg. RS 360-649)
	Multi-Core (Screened)	7/0.2 (0.2 mm ²) (Eg. RS 367-454)
Analog Inputs	Twin-core (Screened)	7/0.2 (0.2 mm ²) (Eg. RS 367-533).
	Single Twisted-Pair (Screened)	7/0.254 (22 AWG) (Eg. RS 360-649)
RS485 LAN Cables	Single Twisted-Pair (Screened)	7/0.254 (22 AWG) (Eg. RS 360-649)
	Twin Twisted Pair (Screened)	7/0.203 (24 AWG) Foil Screen (Eg. RS 368-160, RS 368-738)
	Twin Twisted Pair (Screened)	7/0.25 (22 AWG) Foil Screen (Eg. RS 367-959)
General Multipurpose Signal / Data Cable	4 x Twisted Pair (Screened)	7/0.203 (24 AWG) Foil Screen (Eg. RS 368-176)

3. COMMISSIONING

The commissioning process consists of :-

- Inspecting the installation
- Powering up the logger and checking basic functionality
- Programming the logger configuration using UCOMM
- Verifying that all sensors / transducers are working, connected and being recorded
- Verifying satisfactory RF reception from all transmitters.
- Generating an electronic configuration certificate
- Completing a Logger Commissioning Record

Use of the UCOMM commissioning utility requires specialist knowledge of the logger and its operation.

3.1 Initial Checks

Check that the links on the PCB are correctly installed for each universal input. If an RS485 option board is fitted, its links should also be checked. Refer to section [4.5] for details.

Ensure all connectors are properly plugged in.

If the logger is supplied with a UPS, plug in the main battery (connector PL5 - if it is not already connected). Switch on the mains supply and check that the upper two yellow indicators (Mains & Charge) are lit and that the yellow Heartbeat indicator is flashing. If the UPS option has not been ordered, there will be no main battery and the yellow "Charge" indicator should be off.

3.2 Configuring using UCOMM

UCOMM is a special configuration software utility available separately from SHM. The logger can be pre-configured prior to installation, or it can be configured after installation.

The use of UCOMM is covered in a separate manual.

The logger has a software-programmable configuration that is stored in non-volatile EEPROM memory. This means that it is retained even when all mains and battery power is disconnected. UCOMM is used to read, display, edit and store this configuration information.

The following parameters should be set or checked using UCOMM :-

1. The Logical Logger Number. For a single-logger installation, the default of 1 can be used. However for an RS485 network of loggers, each must have a unique Logical Logger Number. It is most convenient to program this to 11, 12, 13 etc. in order round the network.

2. The option codes "Option A" and "Option B". These ensure that the logger firmware recognises the options fitted. Refer to the UCOMM manual.
3. If any special firmware features, such as "Dial In", "Modem Answer Window" or "Alarms" are required, these must be suitably configured.
4. Channel configuration for each channel. For Digital (Pulse) channels, this comprises :-
 - Logging Interval
 - Physical Input number
 - Channel Size (memory allocation)
 - Pulse pre-scaler value
 - Initial count

For Analog or Temperature channels, this comprises :-

 - Logging Interval
 - Physical Input number
 - Channel Size (memory allocation)
5. If alarms are required, they should be enabled for the alarm channels and the high and low thresholds set.
6. The logger time. NB. It is normal for the logger to use the same time reference all year (eg. Greenwich Mean Time) rather than re-program it for daylight saving times.

It is advisable to check the configuration data after installation, even if the logger has been pre-configured. In particular, if the Memory battery has been disconnected at any time or become discharged, then the logger's clock / calendar will not have a valid time, and the correct time will need to be commissioned before the logger begins logging.

3.2.1 Configuring Radio-Link Channels


3.2.1.1 Using UCOMM

Channels 1 to 8 are Universal, and can be configured independently of each other.

Channels 9 to 32 are Radio-Link channels, and have certain restrictions as to how they can be configured.

The following parameters **cannot** be changed for Radio-Link channels :-

Channel Type	Always defaults to Digital (pulse-counting). If the corresponding transmitter unit is an analog or temperature type, then the channel type will change after the first transmission is received.
Input Line	Always the same as the channel number.
Alarm Settings	Alarms are not supported. NB. An alarm exception is logged alongside the data whenever an internal communications error occurs while reading the channel counts (this implies a hardware problem). An alarm exception is also generated if the transmitter unit reports "low battery". However, this does not generate any external alarm notification.

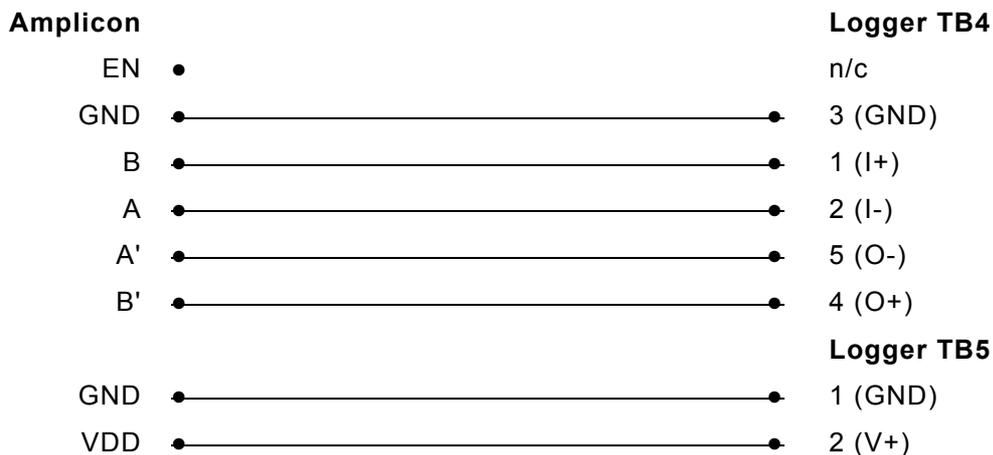

3.3 Verification

Connect a portable PC to the 9-way D connector on the bottom face of the logger and run the configuration utility UCOMM on the PC.

Check that the configuration can be read and is correct.

Check that the logger's time and date are correct.

Use the 'Monitor Channels' function to display all the channel inputs. Where possible, check that each input is operating correctly as follows :-

- For Pulse inputs, the advance in the count can be compared to the advance on the meter registers, or pulses can be artificially induced by shorting the cable at the far end.
- For Analog inputs, verify the readings using a DVM.
- For Temperature inputs, verify the readings using a thermometer.
- Status inputs can be tested by changing the state of the device being monitored.

For Radio-link channels, use UCOMM to read in the entire logger personality and display it. On Page 4 of the display (Warnings), check that all radio channels in use are showing "OK". Other warning codes are as follows :-

80H	Internal communications error (resetting the logger may clear this).
44H	No RF. A transmission for this channel has not been received for at least 3 minutes.
48H	Low battery warning from transmitter unit.

If the logger is fitted with a modem, check by dialling from another location that the logger answers the line and that data can be read.

In normal every day use, the logger will be interrogated by a specialist software application, such as Stark RT Energy Monitoring Software. The final step is to configure the application with details of the logger, and check that it will interrogate the logger correctly, via modem, LAN or whatever communications medium is being used.

4. DESCRIPTION

4.1 Indicators

4.1.1 Logger Unit

The RL32 Logger Unit has three external indicator LEDs. The LED functions are as follows :-

- **AC Mains** - Yellow (Upper). Indicates presence of the mains supply when lit.
- **Battery Charge** - Yellow (2nd from top). Indicates that the main battery is connected and is being charged when lit.
- **Heartbeat** - Yellow (Middle). Flashes briefly once per second showing that the main processor is properly functioning.
- **Receive Data** - Red. Flashes briefly as serial data is received by the logger from one of the communications ports.
- **Transmit Data** - Green (Lower). Flashes briefly as serial data is transmitted by the logger.

If the Heartbeat flashes are so brief as to be barely visible it may indicate that the clock / calendar does not have a valid time and date. The logger will not log anything in this state, but all that is required to restore normal operation is to set the logger to the correct time.

In addition, there are two internal LEDs on the upper expansion board of the logger, whose functions are as follows :-

- **Receiving** – (LED1 - Green). This is lit while reception of serial data from the Radio Receiver is in progress. It normally flashes briefly for every message received.
- **Error** – (LED2 - Red). This is lit if there is a communications error (eg. CRC error) while receiving serial data from the Radio Receiver.

4.1.2 Radio Receiver Unit

The RL32 Radio Receiver has three indicator LEDs. The LED functions are as follows :-

- **RX / Power** - Green (Upper). Indicates that the unit is powered.
- **Comms** – Yellow. Flashes briefly whenever data is sent to the main logger unit.
- **TX** – Red (Lower). Flashes briefly whenever a transmission is received.

4.2 Connectors

4.2.1 Logger Unit

Refer to Figure [3] which shows the position of the connectors on the logger main PCB. Pin 1 on each connector is indicated on the figure by a diagonal line.

TB1 - Mains Supply

This 3-way terminal block provides the mains Live, Neutral and Earth connections (labelled **L**, **N** and **E** respectively).

1	Earth
2	Neutral
3	Live

TB2 - Univ Channel Inputs

This 18-way terminal block connector provides connections for the first bank of 8 (Universal) logger inputs.

Each logger input consists of two terminals, the Input itself and the Common (ground). The numbered terminals refer to the Input Number. Terminals marked with a dash are commoned together to the ground of the logger circuitry.

1	Input 1	10	Ground
2	Ground	11	Input 6
3	Input 2	12	Ground
4	Ground	13	Input 7
5	Input 3	14	Ground
6	Ground	15	Input 8
7	Input 4	16	Ground
8	Ground	17	DC o/p (+)
9	Input 5	18	Ground

TB3 - Pulse Output

This is a 2-way terminal block connected to a volt-free electromechanical relay.

1	Normally Open
2	Common

TB4 – Radio Receiver Data

This 5-way terminal block connector provides RS485 data connections to the Radio Receiver. It is fitted on the upper expansion board inside the RL32.

The Transmit Data terminals are not normally connected.

1	Receive Data + (I+)
2	Receive Data – (I–)
3	Ground
4	Transmit Data + (O+)
5	Transmit Data – (O–)

NB. *Pin 1 on this terminal blocks is on the right-hand side as viewed looking into the logger the normal way up.*

TB5- Radio Receiver Power This 2-way terminal block connector provides power to the Radio Receiver. It is fitted on the upper expansion board inside the RL32.

1	Ground
2	DC o/p (V+)

NB. *Pin 1 on this terminal blocks is on the right-hand side as viewed looking into the logger the normal way up.*

PL1 - Local Communications Port This is a polarized 4-way plug. This connector is normally wired to the 9-way D-type socket on the bottom face of the logger. This port is opto-isolated, and requires a steady positive voltage on pin 1 to operate. The connections below are labelled as a DCE.

1	DTR (+5v input)
2	RXD (output)
3	TXD (input)
4	Ground

PL2 - Remote Communications Port This is a polarized 6-way plug. It is intended for connection to a BT modem or radio modem where remote interrogation of the logger is required. This port is opto-isolated, and requires a steady positive voltage on pin 1 to operate.

The signals supported are RXD, TXD, RTS, CTS and DSR, and the connections below are labelled as a DTE. Connection to a modem requires a special cable which should be ordered separately.

1	DSR (+5v input)
2	TXD (output)
3	RXD (input)
4	Ground
5	CTS (input)
6	RTS (output)

PL5 - Main Battery

This is a polarized 2-way plug. It connects to the 8.4V main battery pack which is secured under the sub-chassis.

1	Battery +
2	Battery -

PL6 - LED Connector

This is a polarized 5-way plug. It connects to two LEDs on the sub-chassis.

1	TXD LED - (ground)
2	TXD LED +
3	RXD LED - (ground)
4	RXD LED +
5	Ground

PL7 - LED Connector

This is a polarized 6-way plug. It connects to three LEDs on the sub-chassis.

1	Mains LED - (ground)
2	Mains LED +
3	Charge LED -
4	Charge LED +
5	Heartbeat LED -
6	Heartbeat LED +

PL8 - Modem Connector This is a polarized 8-way plug. It connects to the integral modem, or to some Option Boards.

1	RTS/ (output)
2	TXD (output)
3	CTS (input)
4	RXD (input)
5	V _{aa} power (unregulated)
6	V _{ur} power (unregulated)
7	Ground
8	PON (output)

PL9- Memory Battery This is a polarized 2-way plug. It connects to the 3.6V memory battery pack which is secured under the sub-chassis.

1	Battery -
2	Battery +

Local Communications Port This is a 9-way D-type socket mounted on the bottom face of the logger enclosure, that is connected to PL1 by a short flying lead. This connector can be used as a V24/V28 (RS232-C) connection to an adjacent PC using a straight-through lead.

The signals supported are RXD and TXD. The connector is wired as a DCE, so it can be connected directly to a PC serial port (which is wired as a DTE).

2	RXD (output)
3	TXD (input)
5	Ground
4	DTR (+5v input)

TB3 - RS485 Network *This is either a 5-way or a 6-way terminal block on the RS485 Option Board. There are 2 terminals for the receiver input, 2 terminals for the transmitter output and 1 or 2 common earth terminals. Note that the transmitter and receiver connections are polarity-sensitive.*

The later RS485 board, with 5-way connector is as follows :-

1	Receive Data + (I+)
2	Receive Data – (I–)
3	Ground
4	Transmit Data + (O+)
5	Transmit Data – (O–)

The earlier RS485 board, with 6-way connector is as follows :-

1	Receive Data + (I+)
2	Receive Data – (I–)
3	Ground (Rx)
4	Transmit Data + (O+)
5	Transmit Data – (O–)
6	Ground (Tx)

NB. Pin 1 on these terminal blocks is on the right-hand side as viewed looking into the logger the normal way up.

4.2.2 Radio Receiver Unit

SK1- Data / Power

This 15-way D-type socket is fitted to the lower face of the unit. Connections marked "Reserved" should be left open-circuit.

The positive supply (+Vs) should be between 7.5 and 15 volts.

1	Reserved	9	n/c
2	Reserved	10	Ground
3	Reserved	11	TX (-) Output
4	Reserved	12	TX (+) Output
5	Ground	13	+Vs
6	RX (-) Input	14	Ground
7	RX (+) Input	15	+Vs
8	+Vs		

4.3 Fuse

The supply from the battery is fitted with a 20mm 500mA quick-blow fuse **FS1**.

4.4 Batteries

Two batteries are normally provided in the standard unit.

4.4.1 Main Battery

The operating main battery is a 8.4V Nickel-Cadmium 7-cell battery pack and forms part of the logger UPS. This is maintained on constant trickle charge and provides approximately 15 hours of continuous logging (including radio channels) after the mains supply fails. Full recharge takes approximately 24 hours, though the logger will function normally as soon as mains is re-applied. The main battery pack lead is normally NOT plugged in to the logger as shipped.

4.4.2 Memory Battery

The memory battery is a 3.6V Nickel-Cadmium battery which is also maintained on trickle charge. This provides memory retention of the logged data for 1 month in battery-supported RAM (random access memory). The memory battery also powers the crystal controlled clock/calendar circuit. It is connected to the PCB via a flying lead and 2-pin polarized connector.

4.5 Configuration Links

The logger PCBs have jumper links which are used to further configure the operation of the unit. These links are 0.1" pitch shorting jumpers which plug into arrays of 0.1" spaced pins.

4.5.1 Input Configuration

Each logger Universal Input has its own configuration link. These are all in a row above TB2.

Each input jumper can be placed in one of three positions. These are marked **R**, **I** and **V** on the PCB. These should be set as follows :-

- I** Current Input. Used when connecting to a 4 to 20 mA current transducer.
- V** Voltage Input. Used when connecting to a 0 to 10 Volt voltage transducer.
- R** Temperature Input. Used when connecting to a 10 kOhm thermistor sensor. Also used when connecting to volt-free contacts for logging Pulse Counts or Status (On/Off).

4.5.2 RS485 Option Board Configuration

There are two versions of the RS485 option board, which can be identified as follows :-

- | | |
|--------------|-------------------------------------------------------------------------|
| Later type | Fitted with 5-way terminal block and has links LK5 and LK6 on the board |
| Earlier type | Fitted with 6-way terminal block and does not have links LK5 or LK6 |

The tables below show the links present on the RS485 Options Board. Various pre-configured options boards are available, as indicated by the part number in the right-hand column. Note that the different types of board have different components fitted, so it is not usually possible to re-configure a unit in the field. Any option combinations not shown are not permitted.

Later type board :-

Option	LK1	LK2	LK3	LK4	LK5	LK6	Part No.
RS485 Loop	Out	Out	In	Out	Out	Out	LAN-485N
Integral Modem	Out	In	Out	In	Out	Out	LAN-485M
External Modem	Out	In	Out	Out	In	In	LAN-485A
RS485 Direct	Out	Out	In	Out	Out	Out	LAN-485W
Modem Serial Sw.	In	Out	In	Out	Out	Out	LAN-485S

Earlier type board :-

Option	LK1	LK2	LK3	LK4	Part No.
RS485 Loop	Out	Out	In	Out	LAN-485N
Integral Modem	Out	In	Out	In	LAN-485M
External Modem	Out	In	Out	In	LAN-485A
RS485 Direct	Out	Out	In	Out	LAN-485W
Modem Serial Sw.	In	Out	In	Out	LAN-485S

NB When connecting to the network via an external modem (or directly to a PC) at RS232, use the 6-way connector on the LAN-485A card. A lead for this purpose can be ordered from SHM.

4.5.3 Expansion Board Configuration

The expansion board links should be set as follows :-

LK1	Out
LK2	In
LK3	In
LK4	Out

4.5.4 Radio Receiver Configuration

The receiver unit should be supplied ready-configured. However, the configuration switches can be inspected by removing the four screws that secure the mounting feet and removing the base of the unit.

The receiver unit switches and links should be set as follows :-

Mode Switch SW1 & SW4	Off
Mode Switch SW2 & SW3	On
Comms Switch SW1, SW2 & SW4 to SW7	Off
Comms Switch SW3 & SW8	On
LK1 & LK2	Out

5. OPTIONS

5.1 Hardware Options

The functionality of the basic logger can be extended by fitting expansion cards. These option boards are fitted on the underside of the sub-chassis..

5.1.1 Modems

5.1.1.1 Integral BT Modem

A special BT modem can be fitted on the underside of the sub-chassis. It has a socket on the front for the line connection and is supplied with a cable that plugs into a standard BT line socket.

The board is supplied with its own cable that plugs into PL8.

The modem is supplied programmed with a profile to suit the operation of the logger. It is usually factory-programmed using the following AT commands :-

1	AT&F0E0	Set factory profile zero WITHOUT echo
2	AT&K4	Software flow control
3	ATS0=1	Auto-answer after 1 ring
4	AT&Z0=01962...	If dial-in required, telephone number that logger is to dial.
5	AT&W0	Store as power-up profile

5.1.1.2 External Modems

External modems are connected via a special cable (which must be ordered separately) connected to PL2.

To operate correctly (particularly with the Modem Answer Window and Dial-In software options, the modem profile must be set for the following :-

1. **NO** local echo
2. XON/XOFF flow control
3. Answer after 1 ring
4. Disable answer if DTR off
5. Ensure DSR is always on
6. If dial-in required, the number to dial

For a US Robotics 14400 modem, these settings correspond to the following AT commands :-

1	AT&F2E0	Set software flow-control factory profile WITHOUT echo (also sets DTR & DSR modes)
2	ATS0=1	Auto-answer after 1 ring
3	AT&Z0=01962...	If dial-in required, telephone number that logger is to dial.
4	AT&W0	Store as power-up profile

5.1.2 RS485 Option Board

This option allows a number of loggers to be connected up in a chain network, using a 2-wire plus earth cable between each logger. The maximum distance between each link in the chain is 1500m.

The two ends of the chain are connected to the PC that is to interrogate all the loggers. This PC requires an RS232 to RS485 adapter to be fitted. Alternatively, one of the loggers can be fitted with an integral or external modem, to act as the common access point. Access from PC to any of the loggers is then via dial-up modem.

This option can also be used for direct connection to a PC where the distance involved means that RS232 would not work. The PC requires an RS232 to RS485 adapter to be fitted.

The various ways of connecting up loggers using an RS485 network are illustrated by Figures [5], [6] and [7] (see Section [2.3.4]).

The board is supplied with its own cable that plugs into PL8.

The RS232 to RS485 adapter can be ordered from SHM, and comes with its own instructions. It is connected up as described in Section [2.3.4]. The separate power supply must be wired into the terminal block (observe correct polarity).

5.1.3 Modem Serial Switch Option Board

This option allows the logger to share an external modem with another device.

A special 'T' cable is supplied with this option that is interposed between the modem and the other device and also connects to the logger. Serial communications are normally directed to the other device, but when a special command is received, serial communications are switched over to the logger.

The board is supplied with its own cable that plugs into PL8.

This option can also be used with a network of loggers connected via RS485.

5.2 Software Options

The following software options are available on all loggers and can be enabled as part of the configuration process.

5.2.1 Modem Answer Window

The Modem Answer Window option allows a logger to share a telephone line with another device. If enabled, the logger only answers calls during a pre-programmed time window. The logger's modem is programmed to answer after only one ring. If the line is shared with a FAX or other modem or answering machine, this must be programmed to answer after more than one ring to prevent conflict.

The window start and end time are programmed into the logger as times of day (hh:mm). The window is at the same time every day. If the start and end times are programmed with identical times, the logger will answer a call at any time of day. If the start and end times are programmed with the special dummy times 24:00 and 24:01, the logger will never answer calls.

Note that for testing purposes it is possible to get the logger to answer the calls outside the normal window if a special ring sequence is used.

5.2.2 Dial In

This is another function that allows a logger to share a telephone line with another device. With Dial-In, the logger (or network of loggers connected via RS485 links) is programmed to dial the number of the controlling PC at a specific time every day. The actual time of first dial-in is randomized with a delay of up to 10 minutes, and the logger will keep trying for up to one hour if it cannot get through. A Dial-In logger can share the line with any device without restriction.

The dial-in start time is programmed into the logger as a time of day (hh:mm). If this dial-in time is programmed with the special dummy time 24:00, then dial-in will be disabled. The telephone number dialled is stored in the modem profile rather than the logger.

Where an RS485 network is used, the dial-in start time is programmed into the logger that is connected to the modem.

5.2.3 Alarms

A logger can be programmed to check its Universal Inputs for alarm conditions and notify the user if any parameter goes out of limits.

Each Universal Channel in the logger can be programmed with two alarm thresholds (High and Low). The channel can be programmed to generate an alarm if its reading is between the two threshold values or outside the two values. Each channel alarm can also be individually enabled or disabled.

When an alarm condition is detected on a Universal Channel, an Alarm Flag is logged alongside the historical data.

For the Radio Link Channels (9 to 32), threshold alarms are not supported. However, if a channel's transmitter unit reports "low battery" or if transmissions have not been detected for over 3 minutes, then an Alarm Flag is logged alongside the historical data for as long as the alarm condition persists.

The logger can be programmed to use latching or non-latching alarms.

Non-latching alarms are simplest - when the channel reading changes to a non-alarm value, the channel alarm ceases.

Latched alarms are used if the alarm state is to persist until acknowledged by the user, even if the original alarm condition ceases. The alarm is acknowledged by sending a

special message to the logger. Acknowledging the alarm will clear the alarm state even if the channel reading is still at an alarm value. The channel alarm will only be re-activated if the reading subsequently changes from a non-alarm value to an alarm value.

The way an alarm is detected depends on the type of channel as follows :-

- Digital channels are checked once per minute (at 00 seconds) using the increase in count since the start of the whole logging period. Note that if the alarm becomes active during one logging period, it will stay on at least until the end of the next logging period (as it is only at this time that it is clear that the channel is not going to generate an alarm again).
- Status channels are checked once per second.
- Analog and Temperature channels are checked once per minute (at 00 seconds).

When alarms occur, the logger can be programmed to notify the user using the pulse output relay and/or by dialling in to a PC. The telephone number dialled is stored in the modem profile rather than the logger.

The relay is provided with contacts that are closed for the non-alarm condition and open for the alarm condition. This means that if the logger power fails or if the cable is cut, an alarm will be raised.

If notification is via the on-board relay, it is possible to program one of the logger inputs to be used for a reset button or remote contact that will cancel the relay alarm. Once the alarm relay has been reset, it will only be re-activated if a new channel alarm occurs.

For each channel, the alarm type can be configured to :-

- Disabled Channel does not generate alarms
- Inside Window Alarm if channel reading \geq Low and \leq High
- Outside Window Alarm if channel reading $<$ Low or $>$ High

The High and Low thresholds can be programmed, but the Low threshold cannot be greater than the High threshold (although they can be the same).

Alarm notification is a separate process that can depend on the alarm state of one or more channels. The following parameters configure the notification process :-

- Latched Mode Enables / Disables latched alarms for all channels
- Alarm Mask Determines which channel(s) generate alarm notifications
- Relay Notif. Enables / Disables notification via relay
- Dial-in Notif. Enables / Disables notification via dial-in. If enabled, the logger should either be fitted with a modem or be on an RS485 network accessed via a modem.
- Reset Input Determines which logger input (if any) is used to cancel notification via the relay

Operation of alarm notification is explained below.

5.2.3.1 Non-Latched Alarms

In this mode, if the alarm notification is not cancelled, the notification simply follows the alarm condition. However if required, the alarm notification (relay and / or dial-in) can be cancelled. The occurrence of a new alarm will re-trigger notification.

The alarm relay will be activated :-

1. When any un-masked channel alarm in this logger changes from off to on

The alarm relay will be de-activated :-

1. When all un-masked channels' alarms in this logger are off.
2. When the alarm reset input (if configured) is shorted to ground.

The logger will begin dialling in :-

1. When any un-masked channel alarm changes from off to on. If the logger and its modem control access to an RS485 network, this applies to any un-masked channel in any logger on the network.

The logger will stop dialling in :-

1. When all un-masked channels' alarms are off. If the logger and its modem control access to an RS485 network, this means all un-masked channels in every logger on the network.
2. When the logger receives a "Stop Dialling In" message.

5.2.3.2 Latched Alarms

In this mode, if alarm notification is not cancelled, the notification can only be de-activated by sending messages to acknowledge all channels generating alarms. However if required, the alarm notification (relay and / or dial-in) can be cancelled. The occurrence of a new latched alarm will re-trigger notification.

The alarm relay will be activated :-

1. When any un-masked channel latched alarm in this logger changes from off to on.

The alarm relay will be de-activated :-

1. When all un-masked channels' latched alarms in this logger are off. This can only happen if all active alarms are acknowledged by messages from the PC.
2. When the alarm reset input (if configured) is shorted to ground.

The logger will begin dialling in :-

1. When any un-masked channel latched alarm changes from off to on. If the logger and its modem control access to an RS485 network, this applies to any un-masked channel in any logger on the network.

The logger will stop dialling in :-

1. When all un-masked channels' latched alarms are off. This can only happen if all active alarms are acknowledged by messages from the PC. If the logger and its modem control access to an RS485 network, this means all un-masked channels in every logger on the network.
2. When the logger receives a "Stop Dialling In" message.

6. MAINTENANCE

In the unlikely event of failure, the entire electronics sub-assembly can be unplugged and removed very easily to be returned to SHM for repair or exchange.

6.1 Removing the Sub-Chassis

If you need to remove the sub-chassis, first unplug any connectors that are wired up (TB1, TB2, TB3, PL1, PL2, TB4, TB5).

The earth strap that connects to the base plate must also be unplugged.

The sub-chassis is fixed to the base plate by two M4 screws. These screws locate in two keyhole-shaped slots in the bottom flange of the sub-chassis.

To remove the sub-chassis, these two screws are slackened by approximately one turn, and the sub-chassis is then slid upwards to release it.

Replacement is the reverse of the removal procedure. When sliding down into position, ensure that the upper flange of the sub-chassis engages behind the metal strip on the base plate.

6.2 Battery Life

The batteries are maintained on low trickle charge with complete discharge occurring only rarely when there are extended power cuts. Under these conditions the batteries can be expected to last for a period in excess of 5 years.

6.3 Battery Replacement

When the main battery requires changing the sub-chassis must be removed from the main enclosure to release the battery. Removal of mains supply and main battery will cause the logger to stop logging. When the main battery is replaced the logger should not lose data or time since these are maintained by the memory battery.

The main battery will support time and data retention while the memory battery is changed.

If both the main battery and the memory battery are disconnected in the absence of mains power, then the logger will lose memory of its logged data and the clock will stop. However, it will not lose its personality profile which is maintained permanently in EEPROM memory.

NB. If the clock stops because of removal of the battery, then the logger will need to have the time and date re-commissioned before it will start logging again.

When changing one or both batteries the personality profile should be checked with a local portable PC first, and confirmed to be the same after the installation is complete. The calendar clock setting should also be checked and reset if necessary.

7. TECHNICAL SPECIFICATION

7.1 Logging Unit

7.1.1 Inputs

Quantity		8 Universal inputs 24 radio-link inputs.
Pulse Counting Inputs		Volt-free contact closure input, 10k pull-up to +5V.
	Minimum pulse width	20ms
	Maximum pulse rate	20Hz
Status Inputs		Binary status input, 10k pull-up to +5V.
	Glitches recorded	20ms (minimum)
Current Inputs	Range	0 to 20 mA
	Input Impedance	250 ohms
	Resolution	10-bit ADC, $\pm 2\%$
Voltage Inputs	Range	0 to 10 volts
	Input Impedance	200 kOhm
	Resolution	10-bit ADC, $\pm 2\%$
Temperature Inputs	Type	Thermistor sensor, 10k nominal at 25°C. Built-in linearizer.
	Range	-80 to +150°C
	Input Impedance	10k pull-up to +5V.
	Resolution	0.1°C, $\pm 0.5^\circ\text{C}$ at +25°C
Protection	Series protection	100 mA PTC thermistor (80 - 100 ohms).
	Shunt protection	12 volt TranZorb™ type transient suppressor.

7.1.2 Channels

Quantity		8 Universal data logging channels 24 radio link logging channels
Input		Each Universal Channel can be configured to monitor any of the 8 physical Universal Inputs.
		Radio-Link channels 9 to 32 always monitor inputs 9 to 32 respectively.
Configuration		Each Universal Channel can be independently configured for channel capacity and logging interval.
Data integrity		Logging interval can be dynamically changed without losing historic data.
Immediate values		All channel inputs can be read as immediate values.
Types		Each Universal Channel can be configured to log data as pulse totalization, status change, analog value or temperature.
		Each Radio Link channel can be pulse totalization, analog value or temperature, depending on the type of RF transmitter.
Pulse Counting Channels	Configurable pre-scaler	1 to 255
	32-bit pulse count register	Pre-settable 9-digit start value.
Status Channels	Event logging	Time and date of every change of state logged.
	Resolution	1 second
Analog Channels	Format	Readings logged as 15 bits plus sign (-32767 to +32767).
	Resolution	Zero reading corresponds to zero input. Maximum reading (+32767) corresponds to maximum input (10 volts or 20 mA).
Temperature Channels	Format	Readings logged as 15 bits plus sign.
	Resolution	Zero corresponds to 0 degrees centigrade. 1 bit corresponds to 0.1 degrees centigrade.
Logging		512 Kbytes of RAM memory provides storage for

RL32 Installation & Operation Instructions

capacity		up to 103,000 readings. See table below.
----------	--	------------------------------------------

7.1.3 Isolation

Sensor Inputs		Sensor input common is normally grounded. For isolated sensors, common input can be made to float by removing LK27.
	Voltage	250V rms. max. common input to chassis with LK27 removed.
RS232		Opto-isolated
	Voltage	110V rms. max. common input to chassis.

7.1.4 Communications

Format	Character Set	7-bit printable ASCII characters and carriage-return.
	Data Format	Asynchronous 7 data bits, 1 stop bit.
	Parity	Even, Odd, Mark (1) or Space (0).
	Baud Rate	1200, 2400, 4800 or 9600
Flow control		XON / XOFF in both directions.
Local access		RS232 port (9-way D-type).
Remote access		Separate RS232 port for connection of external BT modem or PAKNET radio modem.
Modems		Integral BT modem option available.

7.1.5 Time/Date

Source		Quartz calendar clock oscillator synchronized by host when reading.
Accuracy		Accuracy \pm 1 second per day
External Synch.		Volt-free relay contact provides 1-sec time synchronization pulse every 1/2 hour.

7.1.6 Security

Passwords		4-level security system with 32-bit numeric passwords.
	Disabling	Programming null (zero) as the password disables it.
	Level 1	Read data - each channel has its own unique password.
	Level 2	Configure channel - each channel has its own unique password.
	Level 3	Time Control - a single password controls access to regulate the time.
	Level 4	Logger Commissioning - a single password controls access for overall commissioning at installation.
Authentication		Logger readings are protected by an authentication algorithm (based on a 32-bit key) which appends a 16-bit validator to each block of readings.
Comms.		Data transmission is verified by a longitudinal parity check code on each packet (maximum 250 characters).

7.1.7 Electrical

External supply		240V AC or 110V AC \pm 15%
	Power consumption	3VA (maximum)
Main Battery		8.4V NiCad (if UPS option fitted).
	Endurance	15 hours sustained logging operation in the absence of external power.
Memory Battery		3.6V NiCad
	Endurance	60 days of retention for logged data and calendar clock.

7.1.8 Wiring

Connectors	Terminal Blocks	Two-part terminal blocks allow pre-wiring of enclosure prior to fitting of electronic sub-chassis, and easy maintenance.
------------	-----------------	--------------------------------------------------------------------------------------------------------------------------

7.1.9 Enclosure

Construction		Three parts. Base-plate, Sub-chassis and cover.
		Internal sub-chassis slides into wall-mounted base plate. Sub-chassis available separately as OEM unit.
	Material	Mild Steel, powder-coated.
	Fastening	Single thumb screw. Single hole to fit a seal.
	Mounting	3-hole wall mounting. Top mounting has key-hole slot. 6mm stand-off dimples.
Cable entry		Eight 20mm conduit knock-outs for bottom entry of cables. Four 20mm conduit knock-outs for rear entry of cables.
Dimensions	Width	265 mm
	Height	262 mm
	Depth	95 mm
Weight		4 kg.
Environmental		IP 41

Logging memory is allocated on a per-channel basis in blocks of 2500 readings. There are 40 blocks, and the default configuration is 2 blocks per Universal Channel and 1 block per Radio-Link Channel

Data logging times for standard 512k logger with the default memory configuration is:-

Logging Interval (mins)	1	2	5	10	15	20	30	60
Channels 1-8 Duration (days)	3.5	7	17.5	35.5	53.5	71.5	107	214
Channels 9-32 Duration (days)	1.75	3.5	8.5	17.5	26.5	35.5	53.5	107

7.2 Radio Receiver Unit

7.2.1 Enclosure

Material		2-colour polystyrene
Fastening		4 x self-tapping pozidrive screw
Mounting		4 x mounting feet. Fixing centres 95 x 130 mm
Dimensions	Width	82 mm
	Height	150 mm
	Depth	30 mm
Environmental		IP 41

7.2.2 Electrical

External supply		7.5 to 15 volts DC
	Power consumption	30 mA (typical)

7.2.3 RF

Band	UHF 434 MHz	Standard. UHF 869 MHz (Europe) also available
	Tx Power	10 mW
	Rx Sensitivity	-100 dBm
Range	Free Space	70 – 250 m
	Industrial buildings	30 – 200 m
Approvals		EN-300-220-3
Modulation		Wide-band FM

8. SPECIFIC TOPICS FOR RADIO CHANNELS

The following sections relate only to radio-link channels.

8.1 Timeouts and Delays

When the logger stores a logged reading in its historic log, the value will be the last received value (if any). Because transmitters only transmit once every 30 seconds, the logged data could be up to 30 seconds old. As a consequence of this :-

1. The first logged reading following power-up of the logger (and before any transmissions have been received) will be equal to the last logged reading (for Digital channels) or zero for analog or temperature channels.
2. In certain circumstances, the second logged reading after (1) on an analog or temperature channel could be reduced in magnitude due to averaging effects.

A channel's "No RF" alarm flag is set if there has been no transmission received for 3 minutes. As a consequence of this :-

1. If logging every 1 or 2 minutes, the first 1 or 2 readings logged after the last received transmission will not have the "No RF" flag set.
2. If RF failure occurs near the end of a logging period, the alarm flag may not be set until the next logging period.
3. The "No RF" alarm flag will remain set if the RF is lost and then returns during a logging period.

8.2 Digital Channels

The pulse transmitter units maintain their own pulse count which is transmitted to the logger approximately every 30 seconds. A consequence of this is that the total count is maintained even if logging is interrupted by RF problems or the logger being switched off.

The consequences of this are :-

1. If RF communications are lost for a time (eg. Due to interference or a large van parked in the path between transmitter and receiver), then successive logged values will be the same (zero advance) while there is no RF. However the transmitter unit will continue to count pulses.

The Alarm Flag will be set for each of these logged readings because there was no RF at the time.

Once RF reception is restored, the next logged reading will have a large advance corresponding to the actual number of 'missed' pulses at the transmitter. However, should the advance exceed 65536, then the advance logged will be equal to the advance at the transmitter modulo 65536.

2. If the logger is switched off for a time, then no readings will be logged, even though the transmitter unit will continue to count pulses.

Once the logger is switched on again, the next logged reading following reception of a message from the transmitter will have a large advance corresponding to the actual number of 'missed' pulses at the transmitter.

However, should the advance exceed 65536, then the advance logged will be equal to the advance at the transmitter modulo 65536.

3. The very first time that a particular transmitter sends a message to the logger, then the logged reading will be an arbitrary number, corresponding to the count stored in the transmitter.

To eliminate the spurious initial reading, simply use UCOMM to re-configure the channel, and subsequently there should be no more spurious readings..

8.3 Analog Channels

Analog and temperature transmitters simply send the current value every time they transmit.

The consequences of this are :-

1. If RF communications are lost for a time (eg. Due to interference or a large van parked in the path between transmitter and receiver), then successive logged values will be the same as the last valid value while there is no RF.

The Alarm Flag will be set for each of these logged readings because there was no RF at the time.

Once RF reception is restored, the next log after the first transmission received will be the correct value.

2. If the logger is switched off for a time, then no readings will be logged.

Once the logger is switched on again, the first logged reading will be zero, and the next logged reading following reception of a message from the transmitter will be the correct value.

8.4 Troubleshooting

If some of the radio-link channels are not working, it is possible to examine the output of the RF Receiver and see which transmitter address and transmitter types are being received.

To do this, the receiver needs to be switched to "RS232" mode, and a special power-and-data cable used between the 15-way socket and the serial port of a PC. The special cable is available from SHM.

The receiver unit switches and links should be set as follows :-

Mode Switch SW1, SW2 & SW3	Off
Mode Switch SW4	On
Comms Switch SW1, SW2, SW4, SW5 & SW7	Off
Comms Switch SW3, SW6 & SW8	On
LK1 & LK2	Out

NB. Remember to re-set the switches as described in section 4.5.4 before re-connecting to the logger!

To examine the receiver output use a terminal emulator such as Windows Terminal, or HyperTerm. The baud rate should be set to 9600, 8 data bits, 1 stop bit, no parity.