


## Internal Link Options on kWhCube

This document applies to kWhCube meters with V1.06 or software or later. These details are intended for use by **AUTHORISED TECHNICAL PERSONEL ONLY**.

### **DANGER – RISK OF ELECTRIC SHOCK**

The meter must be completely isolated before removing the front panel.

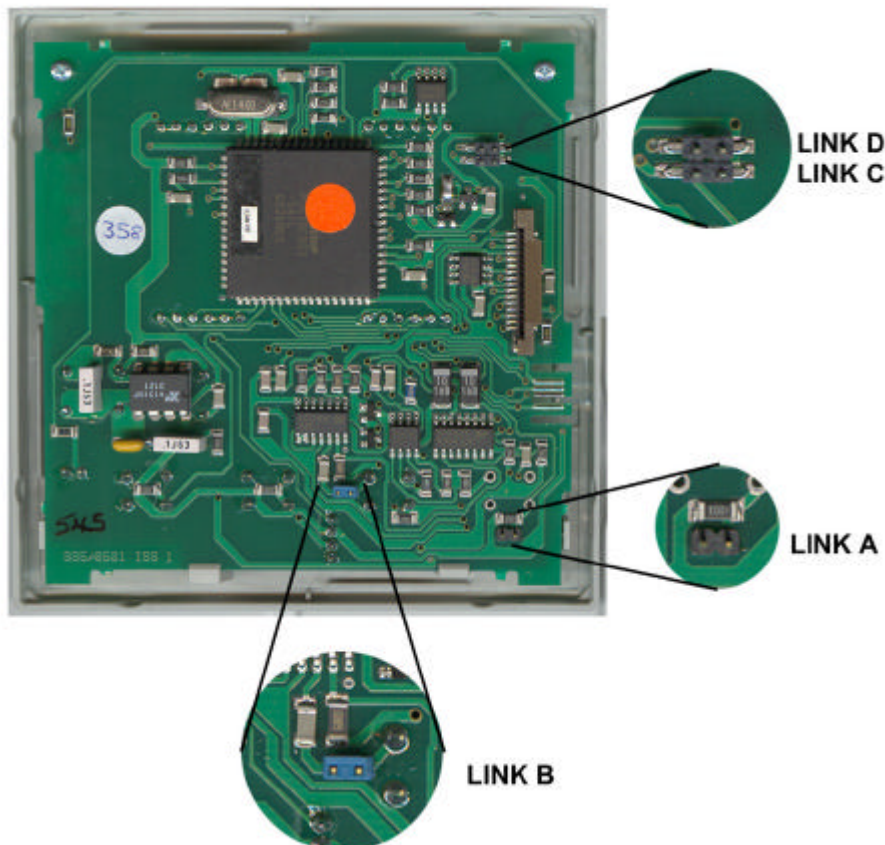

### **LINK A Reset Total kWh**

This link is not normally Omitted on standard kWhCube meters.

#### **If Link A is FITTED:**

Display = Total kWh Page: Press **Prog** and **kWh** keys for 7 secs to reset Total and kWh Count.

Display = kWh Count Page: Press **Prog** and **kWh** keys for 7 secs to reset kWh Count only.

### **LINK B Prog Key Enable**

This link is normally fitted to standard kWhCube meters.

#### **If Link B is OMITTED:**

The **Prog** key will not operate. This prevents reset of both registers and prevents the user entering program mode.

***LINK C Setup use only***

DO NOT FIT THIS LINK!

***LINK D 500ms Pulse Output***

This link is normally Omitted on standard kWhCube meters.

***If Link D is FITTED:***

The pulse output ON period is set to 500ms irrespective of any user setting (e.g. using comms).