

PM 305

Operating Guide



Northern Design

PREFACE

PM305 Operating Guide Revision 2.05 October 2000

This manual represents your meter as manufactured at the time of publication. It assumes standard software. Special versions of software may be fitted, in which case you will be provided with additional details.

Every effort has been made to ensure that the information in this manual is complete and accurate. We revised this manual but cannot be held responsible for errors or omissions.

The apparatus has been designed and tested in accordance with EN 61010-1, 'Safety Requirements for Electrical Equipment for Measurement, Control and Laboratory Use'. This operating guide contains information and warnings that must be followed by the user to ensure safe operation and to maintain the apparatus in a safe condition.

We reserve the right to make changes and improvements to the product without obligation to incorporate these changes and improvements into units previously shipped.

General Editor : Ian Sykes BSc (hons).
Copyright © 2000 : Northern Design (Electronics) Ltd,
228 Bolton Road, Bradford. West Yorkshire. UK.

Contents

1. SAFETY	4
1.1 WARNING SYMBOLS	4
1.2 MAINTENANCE.....	4
2. METER OPERATION	5
2.1 MEASUREMENTS	5
2.2 METER TYPES.....	5
2.3 DISPLAY PAGES	6
2.4 DISPLAY MENUS.....	9
2.5 DYNAMIC DISPLAYS.....	11
2.6 REFERENCE LED.....	11
2.7 NON-VOLATILE MEMORY	12
2.8 REAL TIME CLOCK.....	12
2.9 AUTO ROTATION	13
2.10 BALANCED VOLTAGE MODE	13
3. INSTALLATION	14
3.1 PANEL MOUNTING	14
3.2 CONNECTION	15
3.3 SCHEMATICS.....	18
4. ISOLATED RELAY OUTPUTS	24
4.1 GENERAL DESCRIPTION.....	24
4.2 PULSE OUTPUTS	24
4.3 ALARM OUTPUTS.....	24
4.4 CONNECTING THE RELAYS	25
5. ANALOGUE OUTPUTS.....	26
5.1 GENERAL DESCRIPTION.....	26
5.2 CONNECTING THE ANALOGUE OUTPUTS.....	27
6. PROGRAMMING	29
6.1 DESCRIPTION.....	29
6.2 ENTERING PROGRAMMING MODE.....	30
6.3 SELECTING PROGRAMMING OPTIONS	30
6.4 EXITING PROGRAMMING MODE	30
6.5 DISABLING PROGRAMMING	30
6.6 SETTING THE CT. PRIMARY CURRENT	31
6.7 SETTING THE PT. RATIO	32
6.8 RESET ENERGY REGISTERS	32
6.9 RELAY OUTPUT SET-UP.....	34
6.10 TOGGLE CT AUTO ROTATION	40
6.11 ANALOGUE OUTPUT SET-UP	41
6.12 TOGGLE BALANCED VOLTAGE MODE.....	47
6.13 RESET MAXIMUM DEMAND REGISTERS.....	48
6.14 SETTING THE MD. INTEGRATION PERIOD	50

Contents

6.15 SETTING THE REAL TIME CLOCK (RTC)	50
6.16 SETTING THE METER COMMUNICATION ADDRESS	52
6.17 SETTING THE COMMUNICATIONS SPEED (BAUD RATE).....	52
7. SERIAL COMMUNICATION	53
7.1 INTRODUCTION	53
7.2 COMMUNICATION ADDRESS	53
7.3 DATA FORMAT.....	53
7.4 ISOLATED DC POWER SUPPLY	54
7.5 RS232	54
7.6 RS485	55
7.7 RS422	56
7.8 COMMUNICATION PROTOCOL	57
7.9 DATA TABLES.....	61
7.10 RTU COMMANDS	70
7.11 EXCEPTION RESPONSES.....	75
8. SPECIFICATION	76

1. Safety

1.1 Warning Symbols

This manual provides details of safe installation and operation of the meter. Safety may be impaired if the instructions are not followed. Labels on individual meters give details of equipment ratings for safe operation.

Take time to examine all labels on the meter and to read this manual before commencing installation.

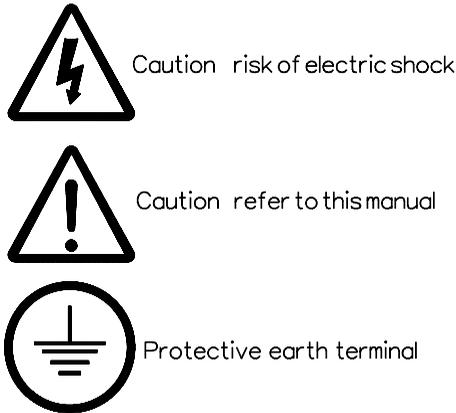


Figure 1.1 Safety Symbols

WARNING

The meter contains no user serviceable parts. Installation and commissioning should be carried out by qualified personnel

1.2 Maintenance

The equipment should be maintained in good working order. Damage to the product should be repaired by the manufacturer. The front panel of the PM305 may be cleaned by wiping lightly with a soft cloth. No solvents or cleaning agents should be used. All inputs and supplies must be isolated before cleaning any other part of the equipment.

2. Meter Operation

2.1 Measurements

The PM305 makes use of a high speed micro-processor and an Analogue to Digital converter to monitor input signals from three independent phases. Each phase voltage, current and power (kW) are measured directly and a number of other parameters derived from these in software.

The measurement process is continuous with all six signals scanned simultaneously at high speed. Unlike many other sampling systems, which sample one phase after another, this ensures that all input cycles are detected. Distorted input waveforms, with harmonics to the 20th are therefore detected accurately. Derived parameters are calculated and displayed approximately once a second, scaled by user programmed constants for current and voltage transformers. A floating point processor provides true r.m.s. readings over a wide range of inputs. Instantaneous power parameters are integrated over long time periods providing a number of energy registers.

System frequency is detected by digital processing of the phase 1 voltage signal.

2.2 Meter Types

A variety of PM305 meter types are available to suit a range of applications. The meter type defines the number of pages which may be displayed and the parameters metered.

A list of meter types currently available may be obtained from the distributor. This manual covers all meters independent of type.

Operation

2.3 Display Pages

A full list of pages available for display throughout the range of PM305 meter types is shown below. Each meter type contains a subset of these, not necessarily displayed in the order shown.

Note : Positive instantaneous values are displayed without a preceding sign.

± 999.9 kW
1 2 3 4 5 6.7 kWh

3-Phase kW & kWh.

Negative kW readings signify power exported from the measured load.

± 999.9 kVA
1 2 3 4 5 6.7 kVAh

3-Phase kVA & kVAh.

Negative kVA readings signify power exported from the measured load.

L 1 2 3 4 5.6 kVArh
C 1 2 3 4 5.6 kVArh

3-Ph Inductive & Capacitive kvarh.

'L' indicates the inductive register and 'C' the capacitive.

± 999.9 kVA
1 2 3 4 5 6.7 kVArh

3-Ph kvar & Total kvarh (Cap + Ind)

Negative kvar readings signify a capacitive load (No sign for inductive)

E 1 2 3 4 5.6 kWh
E 1 2 3 4 5.6 kVAh

Export kWh & Export kVAh.

Export registers indicate for total energy fed out of the load into the supply network, i.e. generated energy.

P1 ± 999.9 kW
PF ± 1.000

Phase 1 Power (kW) & Power Factor.

Negative kW signifies power exported from a load (or a rotated CT). Negative PF signifies a capacitive load.

P2 ± 999.9 kW
PF ± 1.000

Phase 2 Power (kW) & Power Factor.

Negative kW signifies power exported from a load (or a rotated CT). Negative PF signifies a capacitive load.

P3 ± 999.9 kW
PF ± 1.000

Phase 3 Power (kW) & Power Factor.

Negative kW signifies power exported from a load (or a rotated CT). Negative PF signifies a capacitive load.

P 999.9 V
1 999.9 A

Phase 1 Voltage & Current.

True r.m.s. reading of current and voltage, scaled by CT primary and PT ratio settings.

P 999.9 V
2 999.9 A

Phase 2 Voltage & Current.

True r.m.s. reading of current and voltage, scaled by CT primary and PT ratio settings.

P 999.9 V
3 999.9 A

Phase 3 Voltage & Current.

True r.m.s. reading of current and voltage, scaled by CT primary and PT ratio settings.

Operation

L1	9 9 9.9	v
L2	9 9 9.9	v

Line Voltage 1 & Line Voltage 2.

True r.m.s. reading of line to line voltages.
L1=Ph1-Ph2; L2=Ph2-Ph3.

L2	9 9 9.9	v
L3	9 9 9.9	v

Line Voltage 2 & Line Voltage 3.

True r.m.s. reading of line to line voltages.
L2=Ph2-Ph3; L3=Ph3-Ph1.

Av	9 9 9.9	v
to	9 9 9.9	A

Average Voltage & Total Current.

Calculated values of $V_{av}=(V1+V2+V3)/3$ and $I_{to} = I1+I2+I3$.

PF ±	1.0 0 0
F	5 0.0 0

3-Phase Power Factor & Frequency

Negative PF signifies a capacitive load.
Frequency is measured from the phase 1 voltage waveform. F displays "-----" if phase 1 volts is less than 10% full scale.

2 5.1 2.9 5
1 2.3 0.2 2 h

Real Time Clock.

Current Date/Time. The example shown is 25/12/95 at 12:30:22. (Christmas Dinner Time)

1 2 3.4 kW PK
1 2 3.4 kW MD

3-Phase KW Maximum Demand.

kW Pk is the stored peak period total.
kW MD is the current period accumulating value.

1 2 3.4 kVA PK
1 2 3.4 kVA MD

3-Phase KVA Maximum Demand.

kVA Pk is the stored peak period total.
kVA MD is the current period accumulating value.

2.4 Display Menus

A subset of pages shown above is organised into two menus on each meter type. Pages available on each meter type are shown in Table 2-1.

The **UP** and **DOWN** keys are used to step between each page on the selected menu and the **LEFT** key to toggle between the menus. If the meter is left in the sub-menu for longer than 4 minutes it will automatically revert to the main menu.

Display Page	Menu	Type 1	Type 2	Type 3	Type 4	Type 5	Type 6	Type 7	Type 8
3-Ph kW 3-Ph kWh	MAIN	✓	✓	✓	✓	✓	✓	✓	✓
3-Ph kVA 3-Ph kWh	MAIN		✓	✓		✓	✓	✓	✓
kvarh (Ind) kvarh (Cap)	MAIN		✓	✓		✓	✓	✓	✓
3-Ph kvar Total kvarh	MAIN		✓	✓		✓	✓	✓	✓
3-Ph PF Frequency	MAIN		✓	✓	✓	✓	✓	✓	✓
Ph-1 Volts Ph-1 Amps	MAIN			✓	✓		✓		✓
Ph-2 Volts Ph-2 Amps	MAIN			✓	✓		✓		✓
Ph-3 Volts Ph-3 Amps	MAIN			✓	✓		✓		✓
Ph-1 kW Ph-1 PF	SUB	✓	✓	✓	✓	✓	✓	✓	✓
Ph-2 kW Ph-2 PF	SUB	✓	✓	✓	✓	✓	✓	✓	✓
Ph-3 kW Ph-3 PF	SUB	✓	✓	✓	✓	✓	✓	✓	✓
L1-L2 Volts L2-L3 Volts	SUB			✓	✓		✓		✓
L2-L3 Volts L3-L1 Volts	SUB			✓	✓		✓		✓
Average V Total Amps	SUB			✓	✓		✓		✓
kW MD Accum kW	MAIN					✓	✓		
kVA MD Accum kVA	MAIN					✓	✓		
Date Time	SUB					✓	✓		
Exp kWh Exp kWh	MAIN							✓	✓

Table 2-1 Available Meter Types

Operation

Example : Meter Type 3

MAIN MENU

± 9 9 9.9 kW
1 2 3 4 5 6.7 kWh

↑ PRESS ↓

± 9 9 9.9 kVA
1 2 3 4 5 6.7 kVAh

↑ PRESS ↓

L 1 2 3 4 5.6 kVArh
C 1 2 3 4 5.6 kVArh

↑ PRESS ↓

± 9 9 9.9 kVAr
1 2 3 4 5 6.7 kVArh

↑ PRESS ↓

PF ± 1.0 0 0
F 5 0.0 0

↑ PRESS ↓

P 9 9 9.9 V
1 9 9 9.9 A

↑ PRESS ↓

P 9 9 9.9 V
2 9 9 9.9 A

↑ PRESS ↓

P 9 9 9.9 V
3 9 9 9.9 A

↑ PRESS ↓



PRESS TO
SWAP
MENUS

SUB MENU

P1 ± 9 9 9.9 kW
PF ± 1.0 0 0

↑ PRESS ↓

P2 ± 9 9 9.9 kW
PF ± 1.0 0 0

↑ PRESS ↓

P3 ± 9 9 9.9 kW
PF ± 1.0 0 0

↑ PRESS ↓

L1 9 9 9.9 V
L2 9 9 9.9 V

↑ PRESS ↓

L2 9 9 9.9 V
L3 9 9 9.9 V

↑ PRESS ↓

Av 9 9 9.9 V
to 9 9 9.9 A

↑ PRESS ↓

2.5 Dynamic Displays

The display of instantaneous parameters is controlled to provide maximum resolution under all loading conditions. This is termed 'Dynamic Display'. Dynamic Displaying involves **automatic** adjustment of decimal point and legend prefix (e.g. W, kW, MW, etc.) ensuring 4 digits of resolution on the display at all times.

Table 2-2 shows an example of Dynamic Displaying for instantaneous real power (Watts) over a wide input range.

<i>Measured Load</i>	<i>Displayed Value</i>
10 Watts	1 0 0 0 W
100 Watts	1 0 0.0 W
1,000 Watts	1.0 0 0 kW
10,000 Watts	1 0.0 0 kW
100,000 Watts	1 0 0.0 kW
1,000,000 Watts	1 0 0 0 kW
10,000,000 Watts	1 0.0 0 MW

Table 2-2 Dynamic Display Of Power

2.6 Reference LED.

A light emitting diode (LED) is provided on the front panel of the meter which pulses at a speed proportional to instantaneous kW. This may be thought of as a replacement for the rotating disc on a traditional Ferraris (Electro-Mechanical) electricity meter.

Each LED pulse represents a single increment in the kWh register and lasts for a period of approximately 100ms.

Operation

2.7 Non-Volatile Memory

Standard meters use non-volatile memory to store system parameters in the event of auxiliary mains power failure or brown-out.

The memory devices are inherently secure and do not require a battery or other circuitry to maintain a backup supply. This ensures long term data retention (25 years) with no need for servicing or battery replacement.

The non-volatile memory stores programmed settings (e.g. CT primary), all energy registers and meter calibration data.

2.8 Real Time Clock

Meters displaying maximum demand and/or date & time have a real time clock circuit fitted internally. This circuit also provides non-volatile memory replacing that described in section 2.7.

The real time clock circuit requires a backup supply to maintain timing in the event of auxiliary mains failure. This supply also provides non-volatile memory data retention.

The backup supply is provided by an internal lithium battery which will last for a period in excess of 10 years under normal operation. The battery should be replaced only by an authorised dealer.

2.9 Auto Rotation

The most common wiring error on three phase metering is incorrect rotation of current transformers on the primary conductor. It is not always apparent, from physical wiring layout, the direction of current flow in an installed system.

If CTs are installed in anti-phase to the supply-load current direction, negative measurements of kW, and kVA will result (i.e. export) and the associated energy registers will not accumulate.

Auto Rotation provides a means of correction for this type of wiring error. If enabled (refer to section 6.10) Auto Rotation forces kW and kVA readings to a positive value before measurement scaling and display.

How to use Auto Rotation

- ◆ Standard meters have Auto Rotation ENABLED as a factory default setting.
- ◆ Always attempt to install CTs in the correct orientation, maintaining agreement with schematic diagrams and saving future confusion if adding other equipment.
- ◆ If the meter measures only **imported** power/energy values, **ENABLE** Auto Rotation.
- ◆ If the meter measures **exported** power/energy, **DISABLE** Auto Rotation.

2.10 Balanced Voltage Mode

Balanced voltage mode provides a means of measuring three phase loads using three currents but only a single phase 1 voltage. The software measures all phase 1 parameters, r.m.s currents on phase 2 and 3 and makes the following assumptions for the remaining measurements

Assumptions made by the meter :

- ◆ **Phase 1 PF = Phase 2 PF = Phase 3 PF**
- ◆ **Phase 1 Volts = Phase 2 Volts = Phase 3 Volts**
- ◆ **Phase 2 kW = Phase 1 PF * Phase 1 Volts * Phase 2 Amps**
- ◆ **Phase 3 kW = Phase 1 PF * Phase 1 Volts * Phase 3 Amps**

Balanced voltage mode is enabled in programming mode as described in section 6.12. It is **recommended** that balanced voltage mode, albeit convenient, is only used where it is impractical to connect all three voltages, e.g. for true balanced loads or when the meter is used in portable applications, taking voltage measurement from the auxiliary mains supply.

The assumptions made have a significant effect on accuracy in most cases.

Installation

3. Installation

3.1 Panel Mounting

The PM305 is designed to be mounted in a panel. The meter enclosure is DIN standard 48mm x 96mm allowing use of standard punches. Panels should be of thickness 1mm to 4mm with a rectangular cut out of 92mm (+0.8, -0.0) x 45mm (+0.6, -0.0). A minimum depth of 163mm should be allowed behind the panel for the meter and its wiring.

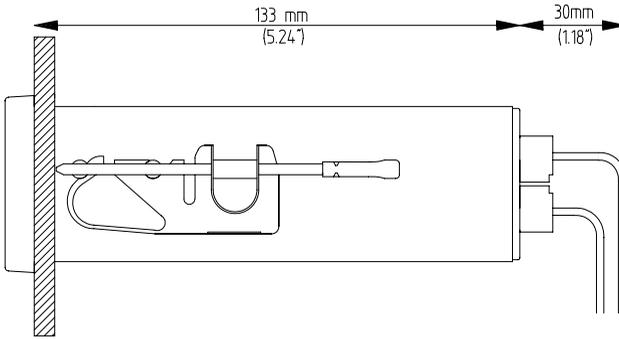


Figure 3.1 Meter Depth

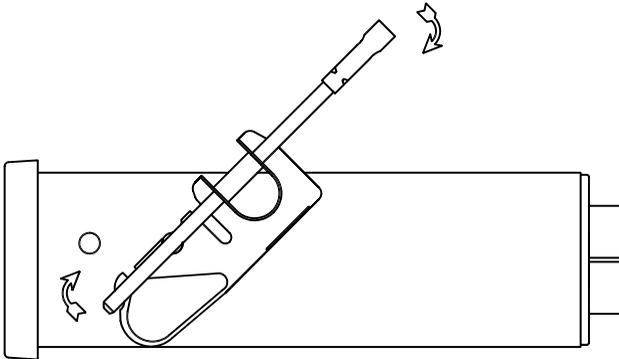


Figure 3.2 Fitting The Screw Mounting Clip

Slide the instrument into the cut out from the front of the panel. Fit the screw mounting clip as shown on either side of the case. Use a flat screwdriver to adjust the screw to secure the meter in the panel. **DO NOT OVERTIGHTEN.**

3.2 Connection

3.2.1 Terminations

All terminations are made at the rear panel of the PM305 after securing the meter in the panel. The layout of the panel is shown in Figure 3.3.

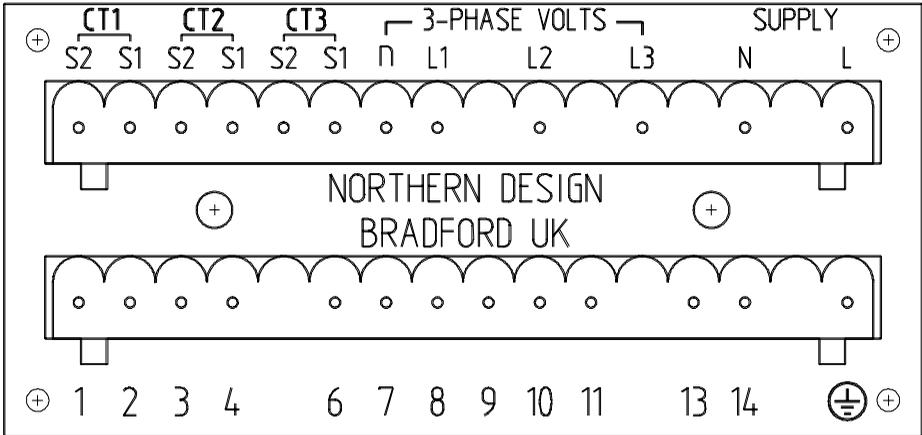


Figure 3.3 PM305 Rear Panel Layout

3.2.2 Protective Earth

A protective earth terminal is provided, This must be connected to a system safety earth before making any other connection.

Installation

3.2.3 The Current Circuit (CT1, CT2 and CT3)

The cable used for the current circuit should be insulated to a minimum of 600V AC r.m.s. The internal conductors must be rated at 6 Amps or greater.

In order to achieve optimum accuracy the cable conductors should have a cross sectional area of 2.5mm^2 . This is the maximum size specified for the instrument's connectors.

The current circuit is designed for connection to the secondaries of industry standard current transformers. These are nominally rated 5 Amps but the meter may optionally be manufactured for use with 1 Amp secondaries. CTs should conform to Class 1 per BS 7626 (IEC 185) or equivalent. These standards provide performance/accuracy criteria over the full operating range of the meter.

Permanent installation types such as toroidal or split-core are recommended.

WARNING

NEVER leave the secondary circuit of a CT open-circuit while a primary current flows. In this condition hazardous voltages may be present at the secondary terminals. Each CT secondary should be short-circuit when not connected to the meter.

3.2.4 The 3-Phase Voltage Circuit (n, L1, L2 and L3)

The cable used to connect the three phase voltage sense circuit should be insulated to a minimum of 600V AC r.m.s. The internal conductors should have a current rating of at least 250mA. The maximum cross sectional area for the conductor is 2.5mm^2 .

Connection to voltages greater than the maximum rating of the meter may be made using instrument grade (Class 1) potential transformers (PTs). Measurements may be scaled to take account of the transformation ratio as described in section 6.7.

3.2.4.1 Protection Fuses

When installing any type of fixed metering it is good practice to provide fused protection. Fuses may be shared with other equipment but should be mounted as close as possible to it.

The three phase voltage inputs of the PM305 require no more than 1mA per channel under no-fault conditions. Fuses should be rated to suit the total input requirements for all protected equipment. The maximum rupture current rating for protection fuses in a system containing only PM305 meters is 160mA.

3.2.5 Auxiliary Mains Supply (N and L)

Solid state meters require a mains supply to power their measurement circuit. In some products this is connected internally to the measurement inputs restricting the input range (usually to $V_{nom} \pm 10\%$).

The PM305 provides an isolated auxiliary mains supply separate from the measurement inputs. The system designer can then decide to externally connect this input in parallel with the measurement inputs or to a separate single phase source.

As a general rule supplying auxiliary power from the measurement inputs is acceptable. Separate connection is made for example if :

- ◆ Measurement voltages vary over a wide range
- ◆ Power availability is restricted (e.g. on PT secondaries)
- ◆ A backup supply is required to maintain meter display.

NOTE : The meter maintains set-up data and energy readings in non-volatile memory for up to 25 years in the event of auxiliary mains failure.

As standard the auxiliary mains supply is rated at 230V $\pm 20\%$, 45-65Hz, 6W(max).

Optional voltages are available (e.g. 115V $\pm 20\%$) on request.

The auxiliary mains supply is internally fused at 240V 100mA (Type T).

WARNING

DO NOT EXCEED THE RATED VOLTAGE of the meter as this may impair safety or cause permanent damage to the product. The maximum rating for the auxiliary input is indicated on the meter enclosure.

Installation

3.3 Schematics

3.3.1 3-Phase 3-Wire Load (2 CTs)

This connection is the standard method if a 3-Phase neutral is not available (Delta). Only two CTs are required as the third current is derived by the connection. This method is suitable for balanced and unbalanced loads.

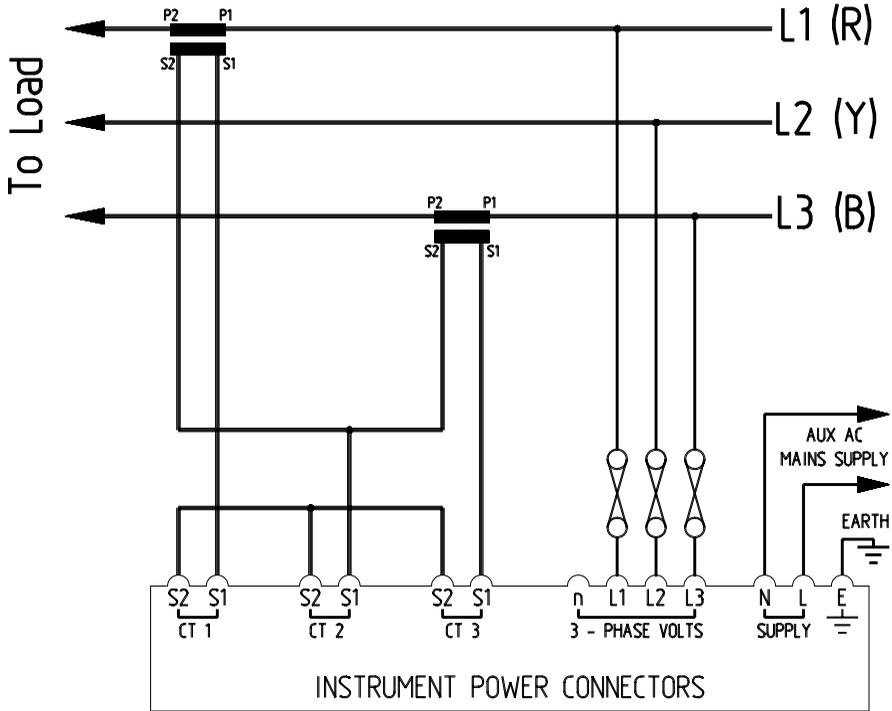


Figure 3.4 Schematic 3-Phase 3-Wire (2 CTs)

3.3.2 3-Phase 3-Wire Load (3 CTs)

This connection is a variation on 3.3.1 using a CT to measure the third current directly. This may improve accuracy in the presence of earth leakage currents. This method is suitable for balanced and unbalanced loads.

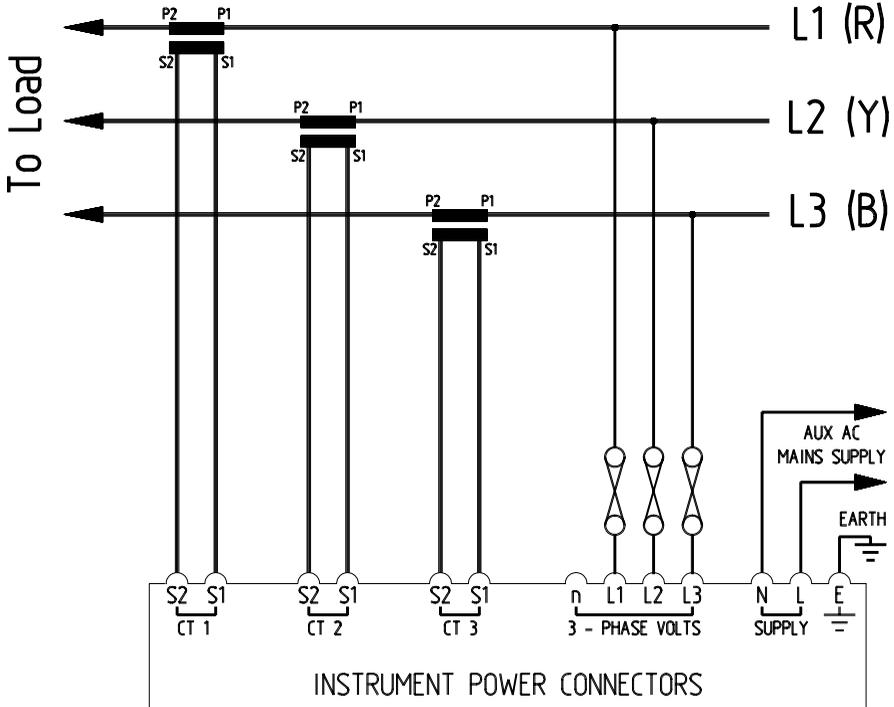


Figure 3.5 Schematic 3-Phase 3-Wire (3 CTs)

3.3.4 Single Phase Load

It is possible to detect single phase power by utilising only one input channel.

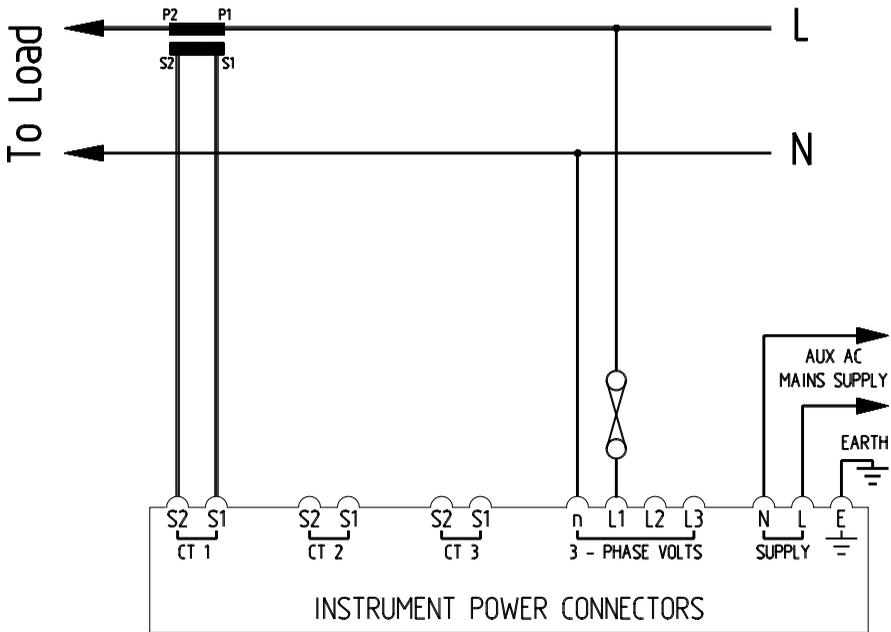


Figure 3.7 Schematic Single Phase

Installation

3.3.5 3-Phase 3-Wire Using Potential Transformers

Potential transformers may be connected to reduce high system voltages to a level suitable for measurement. An example of the use of PTs is shown here.

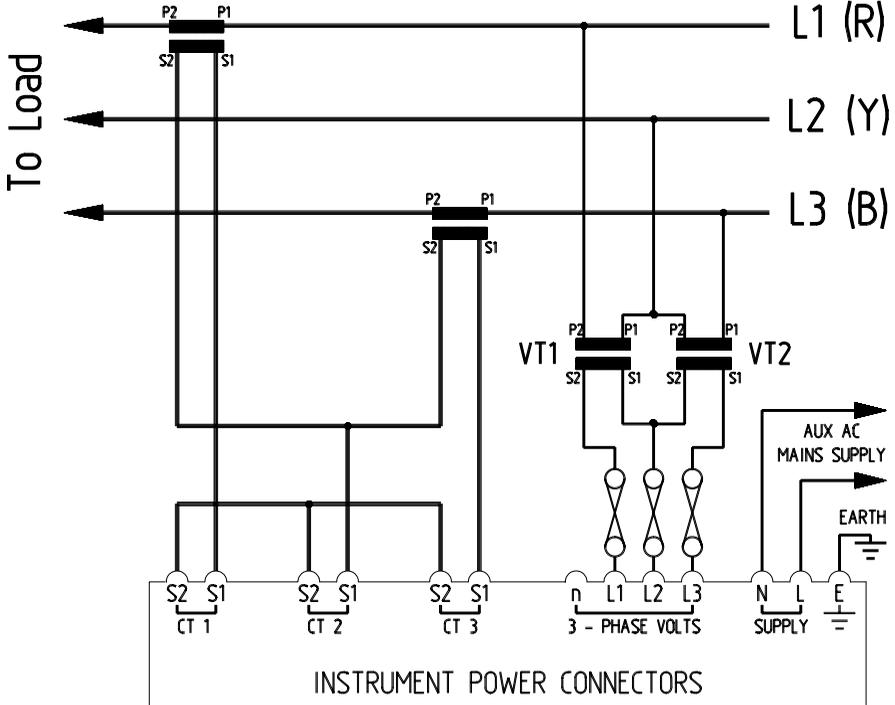


Figure 3.8 Schematic Example Use Of PTs

3.3.6 Adding Multiple Loads

It is possible to connect a meter to add multiple loads by making use of summation current transformers. Addition of two independent 3-Phase 4-Wire loads is shown below using three (5A+5A):5A summation transformers.

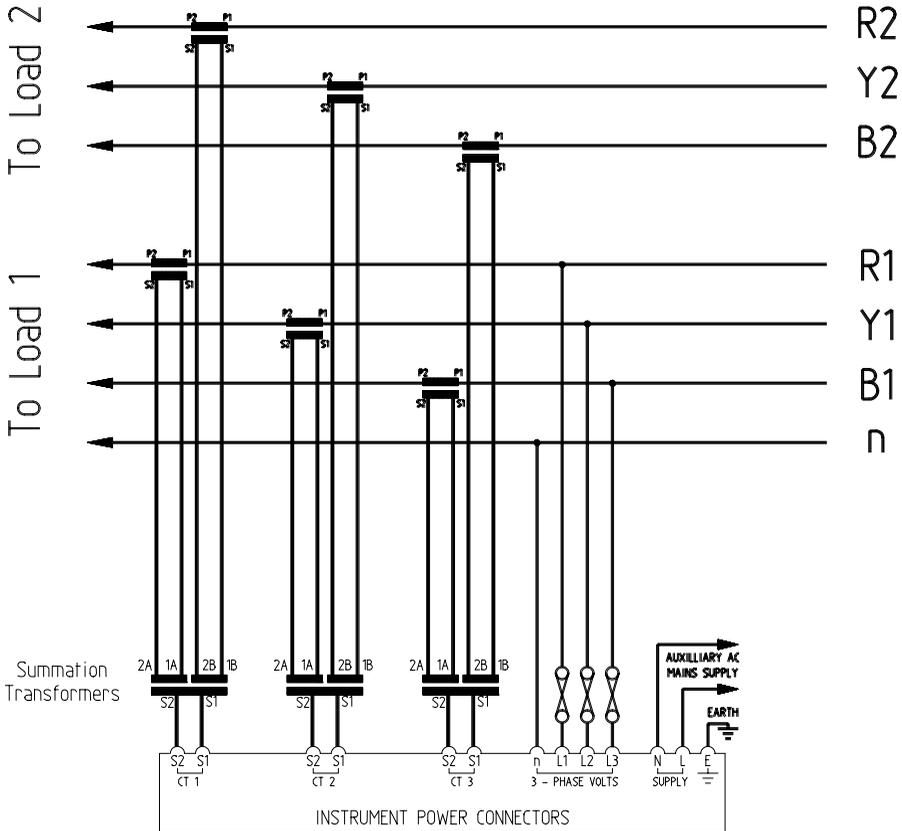


Figure 3.9 Schematic Adding Two Loads

Isolated Relays

4. Isolated Relay Outputs

4.1 General Description

Two isolated relay outputs are provided as standard on every meter. These may be programmed independently to provide pulse outputs or alarms as described in section 6.9.

4.2 Pulse Outputs

Each relay may be set-up to close momentarily for each increment in an associated energy register. Programming, described in section 6.9.1, allows selection of any available energy register, the pulse rate and closure period. Selectable parameters are limited to those available for display by the meter.

Programming flexibility provides a low cost solution in a variety of applications including

- ◆ **Abacus meter data collectors/loggers**
- ◆ **Remote energy counters**
- ◆ **Energy Management Systems**
- ◆ **Data loggers**
- ◆ **Monitoring and Targeting Systems**

4.3 Alarm Outputs

Each relay may be set-up to close on the occurrence of a preset alarm condition. An alarm condition occurs when a chosen instantaneous parameter is greater than (or less than) a set value for a period greater than a given time delay. Selectable parameters are limited to those available for display by the meter.

Programming allows selection of an instantaneous parameter, over or under alarm condition, alarm level, and delay. Programming is described in detail in section 6.9.2.

<p>NOTE : Low power opto relays are used in the meter to provide long life. These ARE NOT SUITABLE FOR DIRECT SWITCHING OF MAINS LOADS. Interposing power relays may be externally fitted if required.</p>
--

4.4 Connecting The Relays

The relays are isolated (to 2kV) from all other parts of the meter circuit and to 50V from each other. Each contact pair is normally open and has a maximum on resistance of 2Ω .

The relays are terminated on the rear panel of the PM305 at terminal numbers 1-2 (Relay A) and 3-4 (Relay B).

The cable used to connect external systems to the relays should be rated to suit the maximum current and voltage expected. It is recommended that screened twisted pairs are used in order to improve electro-magnetic compatibility.

The diagram below shows connection of the relay circuits

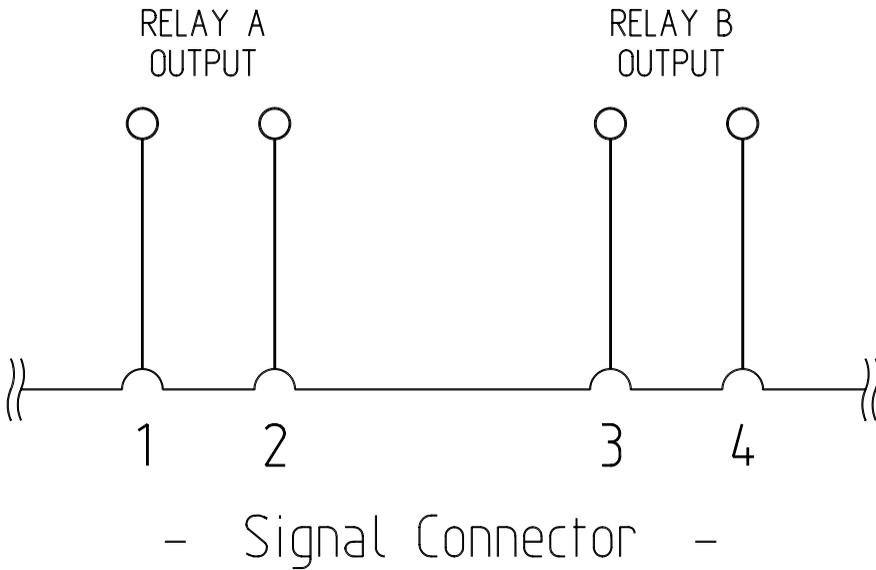


Figure 4.1 Relay Output Connection

5. Analogue Outputs

5.1 General Description

Two isolated analogue outputs are optionally available on a meter. The 'Dual Analogue Output' option must be specified at the time of order. If fitted this will be indicated on the instrument label.

The analogue outputs provide isolated d.c. current signals in proportion to any available instantaneous parameter. These signals may be fed into data loggers, chart recorders, BEMS, etc. as required.

The outputs are isolated at 2.5kV from the metering element and at 50V from each other.

The outputs may be scaled independently as described in section 6.11.

NOTE

The Dual Analogue Output option on a PM305 is fitted in place of the serial communication option. It is not possible to have both options fitted in a single meter.

5.2 Connecting The Analogue Outputs

The analogue output circuits may be configured to provide 0-16mA or 4-20mA signals in proportion to the full operating range of the selected input parameter (e.g. kW). The method of external connection determines which type of signal is output.

5.2.1 Connecting for 4-20mA Outputs

This method of connection is commonly used where output signals require transmission over relatively long cables.

The meter **SINKS** a current from an external d.c. voltage source (nominally 24V) dependant on the level of measured input signal. The voltage source is normally provided by the external measurement system (**LOOP** powered).

A single pair of wires are required for each output as shown below :

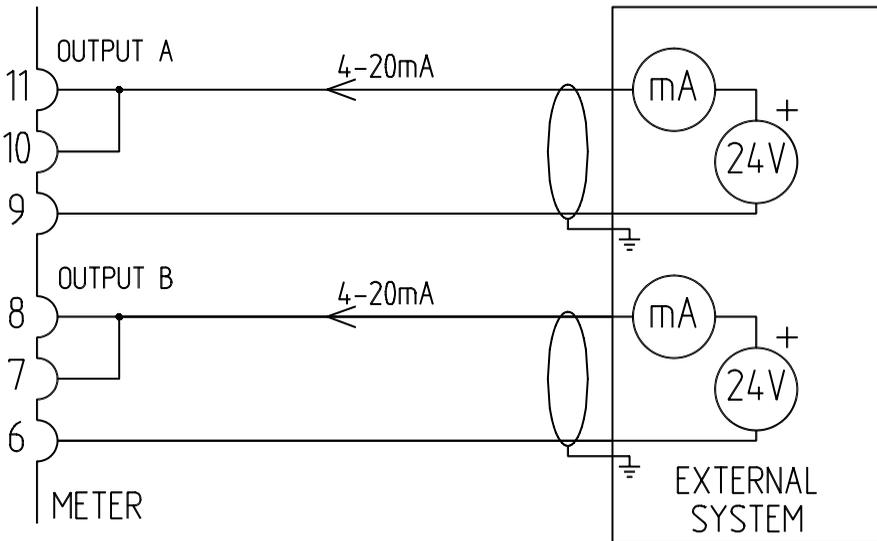


Figure 5.1 Connecting for 4-20mA Outputs

Analogue Outputs

5.2.2 Connecting for 0-16mA Outputs

This method of connection is commonly used to generate local d.c. voltage outputs by connection of an external resistor. By choosing the correct resistor the voltage level may be selected. A 312Ω resistance for example will provide an output of 0-5V d.c.

An external d.c. supply (24V nominal) is required to provide isolated power to the output circuit as shown below. A single supply may be connected in parallel to provide power to both outputs :

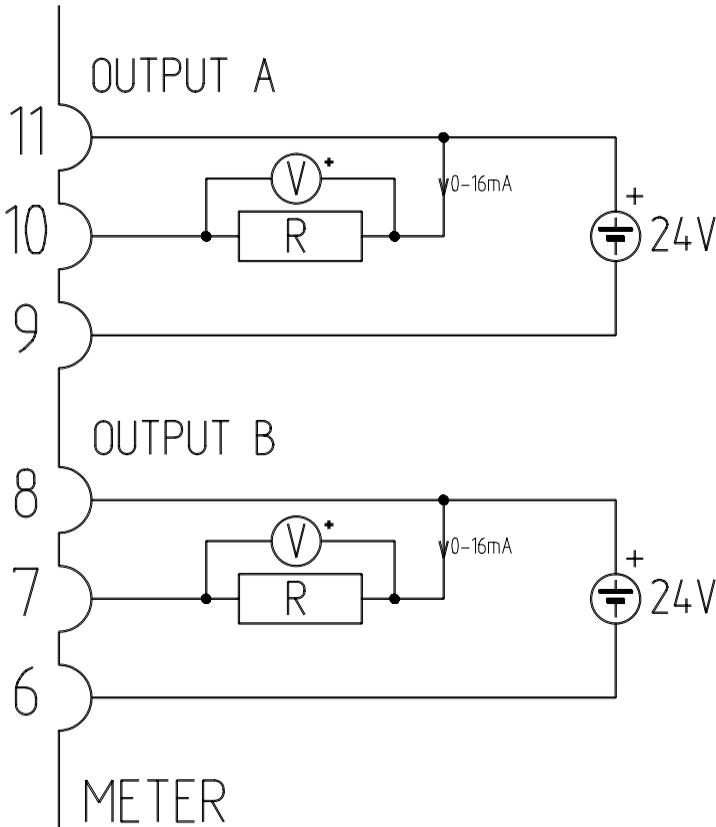


Figure 5.2 Connecting For 0-16mA Outputs

6. Programming

6.1 Description

The PM305 provides many features which may be programmed by the user to suit a specific application. Programming operations are available in a special mode selected using the front panel keys. Programmed parameters are stored in non-volatile memory and are therefore retained in the event of power failure to the equipment. Table 6-1 describes operations made available in programming mode. Certain operations are only available if an individual instrument has the relevant option fitted (e.g. analogue output).

#	<i>Programming Operation</i>	<i>Note</i>
1	Set current transformer primary rating (0.1A to 5000.0A)	1
2	Set potential transformer ratio (0.1:1 to 1000.0:1)	1
3	Reset all energy registers simultaneously to 0	1
4	Set relay output A parameters (Pulse output or Alarm settings)	1
5	Set relay output B parameters (Pulse output or Alarm settings)	1
6	Toggle CT Auto Rotation (ENABLE / DISABLE)	1, 2
7	Set analogue output A (Parameter, scaling and range)	3
8	Set analogue output B (Parameter, scaling and range)	3
9	Toggle balanced voltage mode (ON or OFF)	1, 4
10	Reset Maximum Demand registers to 0 (kVA and kW MD)	5
11	Set MD integration period (5, 10, 15, 20 or 30 minutes)	5
12	Set the real time clock date/time.	6
13	Set the meter Address No . (MODBUS. address 1 to 247)	7
14	Set the communication speed. (2400 to 19200 baud)	7

Table 6-1 Programming Mode Options

NOTES :


1. Available as standard on all meters.
2. Refer to section 2.9 for description of CT. Auto Rotation.
3. Available only on meters with analogue output option fitted.
4. Refer to section 2.10 for description of balanced voltage mode
5. Available only on meters with Maximum Demand option fitted.
6. Available only on meters with Real Time Clock option fitted.
7. Available only on meters with a communications option fitted.

Programming

6.2 Entering Programming Mode

To enter programming mode press the **RIGHT** key and hold for approximately 5 seconds. The display will show 'SET-UP OPTIONS'. Press any key to enter the programming menu at 'CURRENT'. This is entry # 1 in the options menu used to set the current transformer primary current rating.

NOTE : All power measurement is suspended when in programming mode.

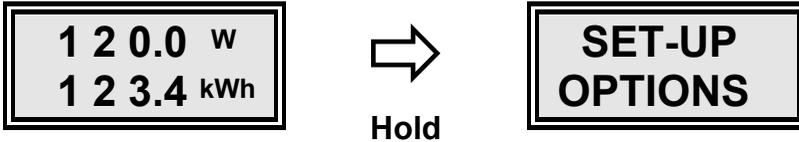

6.3 Selecting Programming Options

Options described in Table 6-1 are selected from the programming menu using the **RIGHT** or **LEFT** keys. Details of how to make changes using each option are given in the following sections.

6.4 Exiting Programming Mode

To return to the normal measurement mode select 'LEAVE SET-UP' from the programming menu and press the **DOWN** key. The display shows 'SET-UP DONE' and then returns to normal measurement mode.



6.5 Disabling Programming

Programming may be disabled by fitting a wire link between pins 13-14 on the rear panel of the meter. This prevents access to the programming menu.


WARNING

Meter inputs should be isolated before carrying out any wiring. Installation and maintenance should only be carried out by qualified personnel.

6.6 Setting The CT. Primary Current

This option applies a scaling factor to measurements made by the meter to take account of current transformers (CTs) which may be installed. The nominal primary current rating of the CT is used to multiply readings in the meter's software. Enter programming mode as described above. Use the **LEFT** or **RIGHT** keys to select option 1, 'CURRENT' from the menu. The bottom line of the display shows the CT **primary rating** in amps.

To adjust the setting **Press and Hold** the **UP** or **DOWN** key to increment or decrement the value. As the key is held down the speed at which the value changes increases progressively. Release the key momentarily to revert to the slowest speed.

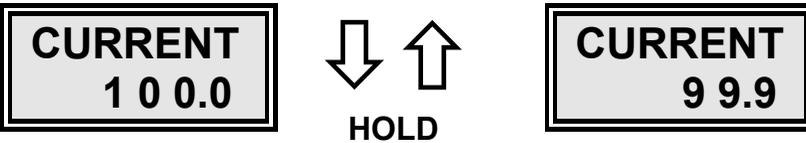

The new value is stored automatically in non-volatile memory and is secure in the event of power failure.


Programming

6.7 Setting The PT. Ratio

This option applies a scaling factor to measurements made by the meter to take account of potential transformers (PTs) which may be installed. The nominal primary to secondary voltage ratio of the PT is used to multiply readings in the meter's software.

Enter programming mode as described above. Use the **LEFT** or **RIGHT** keys to select option 2, 'PT SCAL' from the menu. The bottom line of the display shows the PT primary/secondary ratio.

To adjust the setting **Press and Hold** the **UP** or **DOWN** key to increment or decrement the value. As the key is held down the speed at which the value changes increases progressively. Release the key momentarily to revert to the slowest speed.

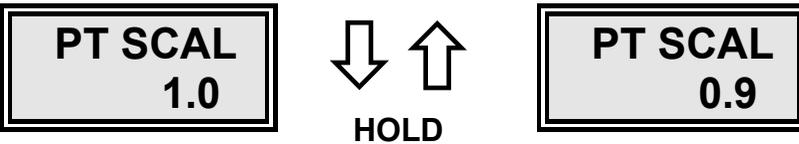

The new value is stored automatically in non-volatile memory and is secure in the event of power failure.

6.8 Reset Energy Registers

This option resets all accumulated energy registers (kWh, kVAh, kvarh etc.) simultaneously to zero. The maximum demand registers, if available, are not affected.


NOTE : This operation is **NON-RECOVERABLE** and accumulated energy register data will be lost.

Enter programming mode as described above. Use the **LEFT** or **RIGHT** keys to select option 3, 'RESET ENERGY' from the menu. Press the **DOWN** key to initiate the reset sequence. The top line of the display flashes to indicate the sequence is initiated. The bottom line of the display shows, 'COUNT 5'. **Press and Hold** the **DOWN** key for 5 seconds to complete the reset operation.

Programming

The number on the bottom line counts down seconds to the final reset operation. If the **DOWN** key is released during the count down period the counter will indicate 5 seconds again. This sequence prevents inadvertent reset of registers. 'RESET SUCCESS' is displayed after 5 seconds and indicates that all registers are now reset to zero.

Pressing UP, **LEFT** or **RIGHT** keys will cancel the operation and display 'RESET ABORTED' before returning to the main programming menu.

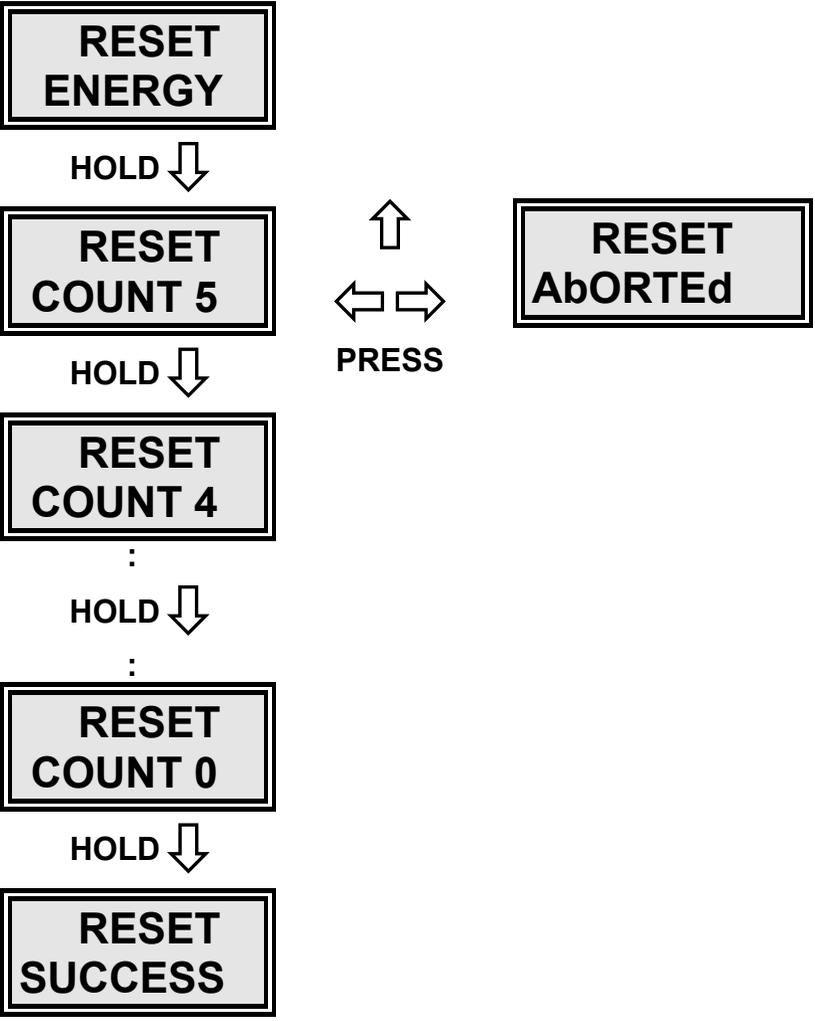

Programming

6.9 Relay Output Set-up

Two isolated signal relays are provided as standard on every meter, these are referred to as 'Relay A' and 'Relay B'. A relay may be individually programmed as a pulse output or an alarm as required by the user. Connection to the relays is covered in section 4.

6.9.1 Programming a Relay as a Pulse Output

Relays may be set up to provide a short volt free contact closure for each increment of any one of the available energy registers. Programming allows the closure period and the rate at which pulses occur to be set.

The closure period (on time) may be set in the range 100ms to 5.0 seconds. A relay may be set to pulse at a maximum rate of one pulse for each increment of the register and a minimum rate of one pulse for each 10,000 increments.

A relay may be linked to any individual energy register which is available for display, dependant on the instrument type. An instrument displaying all energy registers will allow the relay to be linked to the following :

Register	Menu Selection		
3-Phase kWh	PLS PER		1.0 kWh
3-Phase kVAh	PLS PER		1.0 kVAh
3-Phase Inductive kvarh	PLS PER	L	1.0 kvarh
3-Phase Capacitive kvarh	PLS PER	C	1.0 kvarh
3-Phase Export kWh	PLS PER	E	1.0 kWh
3-Phase Export kVAh	PLS PER	E	1.0 kVAh

Note : The displayed pulse rate will vary according to user setting.

Table 6-2 Pulse Programmable Relay Parameters

For example Relay A may be set to provide a 100ms pulse for each 10 kWh accumulated. This signal could be used as an input to a building management system, data logger, etc.

Enter programming mode as described above. Use the **LEFT** or **RIGHT** keys to select option 4 or option 5, '**RELAY A SET-UP**' or '**RELAY B SET-UP**' from the menu. Press the **DOWN** key to initiate the relay programming sequence. The display shows the relay's current mode of operation. Use the **RIGHT** key repeatedly to select '**SET ON ENERGY**'. Press the **LEFT** key to confirm the selection.

The display now shows the current setting for the pulse on time for example '**PULSE t 0.1**' indicating a closure time of 0.1 seconds. **Press and Hold** the **UP** or **DOWN** key to increment or decrement the value as required. Press the **LEFT** key to confirm the selection.

The display now shows the current settings for the pulse rate and associated energy register for example '**PLS PER 1.0 kWh**' indicating a single relay pulse for every 1.0 kWh measured.

To link the relay to a different energy register press the **RIGHT** key repeatedly until the required parameter legend is displayed. . **Press** the **UP** or **DOWN** key repeatedly to select a new pulse rate. Press the **LEFT** key to confirm the settings. The display shows '**LEFT TO FINISH**'. Press the **LEFT** key again to return to the main programming menu or any other key to return to the previous screen.

The settings made during the programming sequence are automatically saved to non-volatile memory. Programmed values are secure in the event of power failure to the instrument.

Programming

**RELAY A
SET-UP**

PRESS ↓

**SET ON
ENERGY**

→
REPEAT

**SET ON
OVER AL**

PRESS ←

**PULSE t
0.1**

↑ ↓
HOLD

**PULSE t
5.0**

PRESS ←

⇒ (Param)

**PLS PER
1.0**
kWh

↑ ↓ (Rate)
REPEAT

**PLS PER
1000.0** kVAh

PRESS ←

PRESS ←

**LEFT TO
FINISH**

6.9.2 Programming a Relay as an Alarm

Relays may be set up to provide an alarm condition when a measured parameter is lower (under alarm) or higher (over alarm) than a specified value. The relays operate as normally open isolated (voltage free) contacts. Programming allows the alarm type, level and delay to be set.

The delay defines the time in seconds over which an alarm condition must be true before the relay contacts are closed. This value is variable in the range 1 to 10 seconds.

The alarm level is programmed as a percentage of full scale (except frequency and PF) of the selected measurement. Full scale values depend on CT and PT and nominal meter ratings. Nominal full scale measurement values are described in Appendix A on page 79. The range of programmable full scale values is -120% to +120% for certain parameters allowing alarms to be set for negative or positive measured values.

Power Factor alarms use only the **absolute** value of the measurement and ignore the sign. For example an under alarm set to trip at 0.8 PF. will operate for capacitive or inductive loads with power factors less than 0.8.

A relay may be linked to a range of instantaneous measurements dependant on the instrument type. A complete list of parameters which may be available on a given meter type is shown in Table 6-3.

<i>Measurement</i>	<i>Menu Selection</i>		<i>Range</i>
3-Phase kW	PERCENT	100.0 kW	±120%
3-Phase kVA	PERCENT	100.0 kVA	±120%
3-Phase kvar	PERCENT	100.0 kvar	±120%
3-Phase Average Voltage	PERCENT	100.0 V	±120%
3-Phase Average Current	PERCENT	100.0 A	±120%
3-Phase Absolute PF	COS PHI	1.000	0 to 1.0
Frequency	HERTZ	50.00	45.0 to 65.0
kW Maximum Demand	PERCENT	100.0 kW ^{PK}	±120%
kVA Maximum Demand	PERCENT	100.0 kVA ^{PK}	±120%

Note : The displayed alarm level will vary according to user setting.

Table 6-3 Programmable Alarm Relay Parameters

Programming

Example 1 :

An alarm is required to indicate that the average voltage has exceeded 250.0V. The meter has a rated nominal voltage of 230.0V and the PT is programmed as 1:1. The nominal full scale voltage is $1 \times 230.0 = 230.0$.

An over alarm is required at 108.7% of full scale nominal volts.

Example 2 :

An alarm is required to indicate that the average current has dropped below 10.0A. The meter has a rated nominal voltage of 100.0A programmed as the CT primary.

An under alarm is required at 10.0% of full scale nominal amps.

Example 3 :

An alarm is required to indicate when the meter detects a significant capacitive load. The kvar reading is ideal for this purpose as it's value swings positive to negative as the load changes from inductive to capacitive.

A level of -5% full scale is assumed by the user to be significantly capacitive. An under alarm is therefore required at -5% of full scale nominal kvar.

Enter programming mode as described above. Use the **LEFT** or **RIGHT** keys to select option 4 or option 5, '**RELAY A SET-UP**' or '**RELAY B SET-UP**' from the menu. Press the **DOWN** key to initiate the relay programming sequence.

The display shows the relay's present mode of operation. Use the **RIGHT** key repeatedly to select '**SET ON OVER AL**' or '**SET ON UNDR AL**' as required. Press the **LEFT** key to confirm the selection.

The display now shows the present setting for the alarm delay time for example '**DELAY t 5.0**' indicating a delay of 5.0 seconds. **Press and Hold** the **UP** or **DOWN** key to increment or decrement the value as required. Press the **LEFT** key to confirm the selection.

The display now shows the present settings for the alarm level as a percentage of nominal full scale and the associated parameter eg. '**PERCENT kW 75.0**' indicating an alarm level of 75.0% of nominal kW.

To associate the alarm relay with a different parameter press the **RIGHT** key repeatedly until the required legend is displayed. **Press and Hold** the **UP** or **DOWN** key to define a new alarm level. Press the **LEFT** key to confirm the settings.

The display shows '**LEFT TO FINISH**'. Press the **LEFT** key again to return to the main programming menu or any other key to return to the previous screen.

The settings made during the programming sequence are automatically saved to non-volatile memory. Programmed values are secure in the event of power failure to the instrument.

RELAY A
SET-UP

PRESS ↓

SET ON
UNdR AL

→
REPEAT

SET ON
OVER AL

PRESS ←

dELAY t
10

↑ ↓
HOLD

dELAY t
1

PRESS ←

PERCENT ^v
120.0

→ (Param)
REPEAT

PERCENT ^{kw}
- 120.0

↑ ↓ (Level)
HOLD

PRESS ←

LEFT TO
FINISH

PRESS ←

Programming


6.10 Toggle CT Auto Rotation

'CT Auto Rotation', provides software correction for CT inputs which are connected in anti-phase. This allows the most common of installation errors to be corrected without expensive re-commissioning work or shut down. Full details on the recommended use of CT Auto Rotation is provided in section 2.9.

Meters are shipped with Auto Rotation enabled as default unless they include measurement of export energies. This programming option allows CT Auto Rotation to be switched **ON** or **OFF** as required. Enter programming mode as described above.

Use the **LEFT** or **RIGHT** keys to select option 6, '**AUTO ROTATE**' or '**NO AUTO ROTATE**' from the menu.

Press the **UP** or **DOWN** key to toggle CT Auto Rotation ON or OFF.

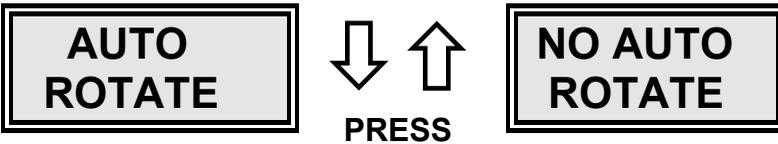

6.11 Analogue Output Set-up

Two isolated analogue output signals are optionally provided (see instrument label for details). These are referred to as '**ANALOG A**' and '**ANALOG B**'. Each output may be individually programmed to provide an analogue signal proportional to a measured instantaneous value.

Wiring configuration provides outputs of **4-20mA** or **0-16mA** as required.

Connection of the analogue output channels is described in section 5.

Programming allows the input parameter, input range and output scale to be defined.

A range of **Input Parameters** may be linked to an analogue output. Only parameters measured by each meter type are made available for output. Table 6-4 shows the maximum number of parameters. A subset of these will be available on each meter type.

<i>Instantaneous Parameter</i>	<i>Menu Display Selection</i>
3-Phase Power Factor	FS PF
Frequency	FS HZ
3-Phase kW	FS 3-PH kW
3-Phase kVA	FS 3-PH kVA
3-Phase kvar	FS 3-PH kVA _r
Average Volts (V1+V2+V3)/3	FS AVE V
Average Amps (I1+I2+I3)/3	FS AVE A
Phase 1 Volts	FS Ph 1 V
Phase 2 Volts	FS Ph 2 V
Phase 3 Volts	FS Ph 3 V
Phase 1 Amps	FS Ph 1 A
Phase 2 Amps	FS Ph 2 A
Phase 3 Amps	FS Ph 3 A
Accumulating kW MD.	RISING kW PK
Accumulating kVA MD.	RISING kVA PK

Table 6-4 Analogue Output Parameters

Programming

The **Input Range** defines how the software handles positive and negative instantaneous meter readings before they are sent to the analogue output.

The **Unipolar** range provides analogue output of positive readings only. Negative values are set to zero before output.

The **Bipolar** range allows output of positive and negative readings. A reading of zero is output at the mid point of the output range.

The **Absolute** range provides output of the value only of the instantaneous readings, ignoring the sign. Figure 6.1 to Figure 6.3. show the characteristic graphs for each output range.

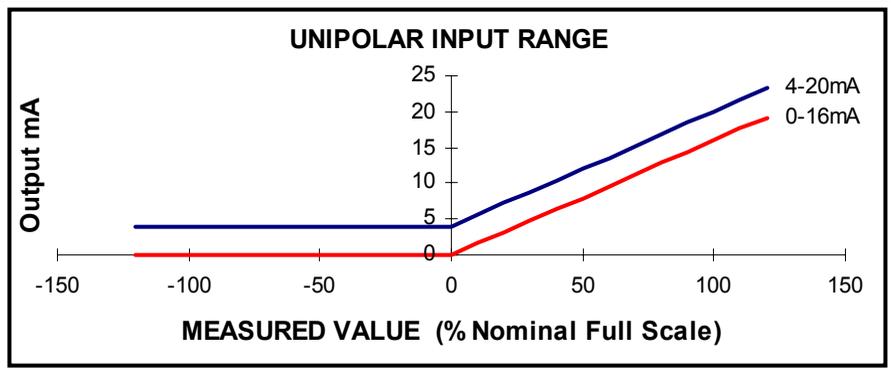


Figure 6.1 Unipolar Analogue Output

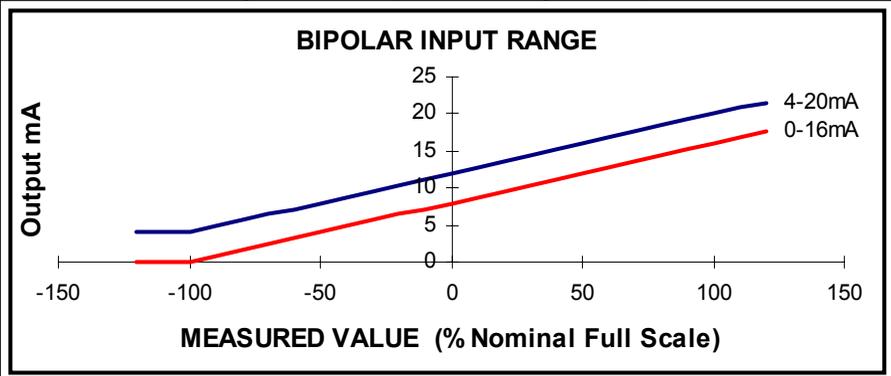


Figure 6.2 Bipolar Analogue Output

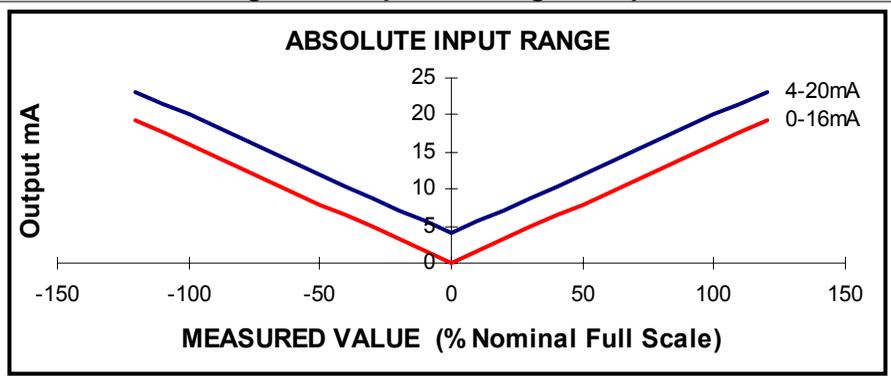


Figure 6.3 Absolute Analogue Output

Programming

The **Output Scale** setting enables the user to define a level of measured signal to represent full scale output (16mA or 20mA). The range of output scaling is 50.0% to 200.0% of the nominal full scale for the chosen parameter.

Example 1

The user in this case has a nominal voltage of 230.0V, a PT setting of 1:1 and a CT primary of 200A. An analogue output of 4-20mA is required, to represent 0-150 Amps (0-75% f.s) on the red phase only :

The output connection is set to provide 4-20mA. A **Unipolar** input range is selected because the current is always positive.

'**FS Ph 1 A 75.0**' is programmed. The parameter is set to phase 1 amps and the 20mA signal set to represent 75% of 200.0 Amps (150.0A) as required.

Example 2

The user requires an analogue output of 4-20mA to represent -34.5kW to +34.5kW. Negative kW in this case represents power exported from the measured load into the supply.

The user in this case has a nominal voltage of 230.0V, a PT setting of 1:1 and a CT primary of 100A. The nominal full scale kW is calculated as $3 \times 230 \times 1 \times 100 = 69.0 \text{ kW}$.

The output connection is set to provide 4-20mA. A **Bipolar** input range is selected because the power may be positive or negative.

'**FS 3-PH kW 50.0**' is programmed. The parameter is set to three phase kW and the 20mA signal set to represent 34.5kW as required.

Example 3

The user requires an analogue output of 0-16mA to represent a three phase power factor of zero to unity. The output required is independent of whether the load is inductive (lag) or capacitive (lead) :

The output connection is set to provide 0-16mA. An **Absolute** input range is selected to take the value of power factor only, ignoring the sign as required.

'**FS PF 1.000**' is programmed. The parameter is set to 3-phase power factor and the 16mA signal set to represent unity as required.

Enter programming mode as described above. Use the **LEFT** or **RIGHT** keys to select option 7 or option 8, '**ANALOG OUT A**' or '**ANALOG OUT B**' from the menu. Press the **DOWN** key to initiate the programming sequence. The analogue output menu entries are only available on meters fitted with the relevant hardware option.

The display shows the analogue signal input range. Use the **RIGHT** key repeatedly to select '**RANGE UNIPOL**' or '**RANGE BIPOLAR**' or '**RANGE ABSOLUT**' as required. Press the **LEFT** key to confirm the selection.

The display now shows the settings for the output scaling and the associated parameter for example '**FS Ph1 A 75.0**' indicating an analogue output providing 4-20mA (or 0-16mA) proportional to 0-75% of the full input range of Phase 1 Current.

To associate the output with a different parameter press the **RIGHT** key repeatedly until the required selection is displayed. **Press and Hold** the **UP** or **DOWN** key to define new output scaling alarm level. Press the **LEFT** key to confirm the settings. The display shows '**LEFT TO FINISH**'. Press the **LEFT** key again to return to the main programming menu or any other key to return to the previous screen.

The settings made during the programming sequence are automatically saved to non volatile memory. Programmed values are secure in the event of power failure to the instrument.

Programming

**ANALOG
OUT A**

PRESS ↓

**RANGE
UNIPOL**

⇒
REPEAT

**RANGE
bIPOLAR**

PRESS ←

**FS 3-Ph^{kW}
100.0**

⇒ (Param)

REPEAT

**FS Ph1^V
50.0**

↑ ↓ (Level)

HOLD

PRESS ←

**LEFT TO
FINISH**

PRESS ←

6.12 Toggle Balanced Voltage Mode


Balanced voltage mode allows a meter to approximate full three phase measurement using three current inputs but only a single (Phase 1) voltage. This is described in more detail in Section 2.10.

Balanced voltage mode assumes that phase 2 and 3 voltages and power factors are equal to those of phase 1. It is recommended that this option is used in only extreme cases where it is not possible to obtain all three voltages for measurement input.

One example of the use of this connection is where a portable meter set is constructed using the PM305 as the main measurement element. The phase 1 voltage may then be connected in parallel with the meter auxiliary supply and picked up from a single phase mains supply.

This programming option allows Balanced Voltage Mode to be switched **ON** or **OFF** as required. As default, the meter is supplied with Balanced Voltage Mode switched OFF. Enter programming mode as described above. Use the **LEFT** or **RIGHT** keys to select option 9, '3-PHASE VOLTAGE' or 'BALANCE VOLTAGE' from the menu.

Press the **UP** or **DOWN** key to toggle balanced voltage mode ON or OFF.

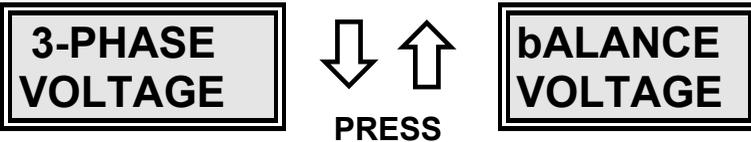

6.13 Reset Maximum Demand Registers

This option resets Stored kW and kVA MD registers simultaneously to zero. The energy registers, are not affected.

This menu option is not available on meters unless they are equipped to monitor maximum demand.

<p>NOTE : This operation is NON-RECOVERABLE and stored MD. register data will be lost.</p>
--

Enter programming mode as described above. Use the **LEFT** or **RIGHT** keys to select option 10, '**RESET** ^{PK} **STORED** ^{MD}' from the menu. Press the **DOWN** key to initiate the reset sequence. The top line of the display flashes to indicate the sequence is initiated. The bottom line of the display shows, '**COUNT** 5'.

Press and Hold the **DOWN** key for 5 seconds to complete the reset operation.

The number on the bottom line counts down seconds to the final reset operation. If the **DOWN** key is released during the count down period the counter will indicate 5 seconds again. This sequence prevents inadvertent reset of registers.

'**RESET SUCCESS**' is displayed after 5 seconds and indicates that all MD. registers are now reset to zero.

Pressing **UP**, **LEFT** or **RIGHT** keys will cancel the operation and display '**RESET ABORTED**' before returning to the main programming menu.

**RESET^{PK}
STOREd^{MD}**

HOLD ↓

**RESET^{PK}
COUNT 5**

HOLD ↓

**RESET^{PK}
COUNT 4**

:

HOLD ↓

:

**RESET^{PK}
COUNT 0**

HOLD ↓

**RESET
SUCCESS**

↑
← →
PRESS

**RESET
AbORTEd**


Programming

6.14 Setting The MD. Integration Period

This option allows the Maximum Demand time period to be set as 5, 10, 15, 20 or 30 minutes. Maximum Demand periods are synchronised each day to 00:00:00 Hrs (midnight) on the internal real time clock (RTC).

Enter programming mode as described above. Use the **LEFT** or **RIGHT** keys to select option 11, 'PERIOD^{PK}' from the menu. The bottom line of the display shows the present period in minutes.

To adjust the setting **Press and Hold** the **UP** or **DOWN** key to increment or decrement the value.

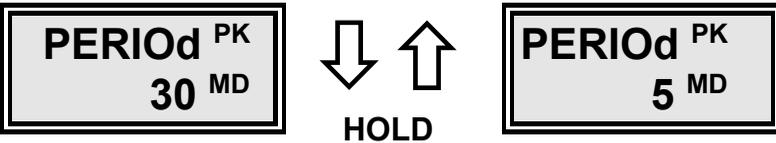

The new value is stored automatically in non-volatile memory and is secure in the event of power failure.

6.15 Setting The Real Time Clock (RTC)

This option is only available on meters fitted with an internal real time clock, for example meters monitoring Maximum Demand. The **Date and Time** may be set to the nearest minute as required.

The internal real time clock maintains time in the event of power fail by means of an internal lithium battery.

Enter programming mode as described above. Use the **LEFT** or **RIGHT** keys to select option 12, 'SET RTC' from the menu. The bottom line of the display shows the current time in Hours Minutes and Seconds.

Press the **DOWN** key to start the programming sequence. The display shows the Day of the Month e.g. 'DAY 11'. **Press and Hold** the **UP** or **DOWN** keys to change the value as required. Press the **LEFT** or **RIGHT** key to confirm the setting.

This process is repeated for **Month, Year, Hour, and Minute** in succession. The user is returned to the main programming menu automatically after confirmation of the minute setting. The clock is set to the new date/time at this point.

SET RTC
10.45.26^h

PRESS ↓

dAY
1

PRESS ←

JAN-dEC
1

PRESS ←

YEAR
0

PRESS ←

HOUR
0

PRESS ←

MINUTE
0

PRESS ←

↑ ↓
HOLD

dAY
31

↑ ↓
HOLD

JAN-dEC
12

↑ ↓
HOLD

YEAR
99

↑ ↓
HOLD

HOUR
23

↑ ↓
HOLD


MINUTE
59

Programming

6.16 Setting The Meter Communication Address

This option allows the serial communication address (Modbus Address.) to be set in the range 1-247. This address is used by a host computer to identify the meter in a multi-drop system. This feature is only available on meters fitted with a serial communications option.

Enter programming mode as described above. Use the **LEFT** or **RIGHT** keys to select option 13, 'ADDRESS' from the menu. The bottom line of the display shows the current meter address number. To adjust the setting **Press and Hold** the **UP** or **DOWN** key to increment or decrement the value.

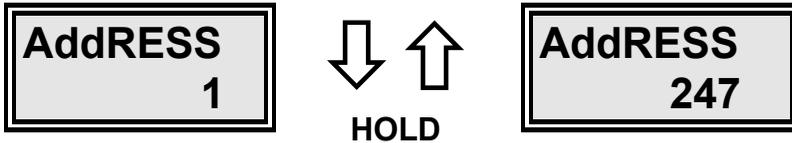


The new value is stored automatically in non-volatile memory and is secure in the event of power failure.

6.17 Setting The Communications Speed (Baud Rate)

This option allows the serial communication speed to be set as **2400, 4800, 9600 or 19200 Baud**. This feature is only available on meters fitted with a serial communications option.

Enter programming mode as described above. Use the **LEFT** or **RIGHT** keys to select option 14 'BAUD' from the menu. The bottom line of the display shows the present baud rate. To adjust the setting **Press and Hold** the **UP** or **DOWN** key to increment or decrement the value.

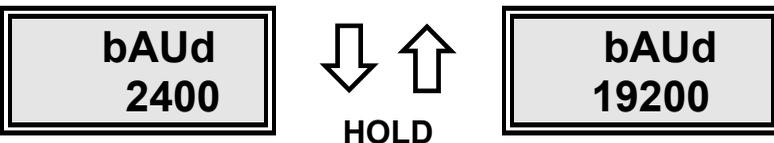

The new value is stored automatically in non-volatile memory and is secure in the event of power failure.

7. Serial Communication

7.1 Introduction

The PM305 is optionally available with serial communications. This allows remote reading and programming of the meter by a host computer (e.g. PC). Either RS232 or RS485/422 may be fitted providing one-one or multi-drop configurations respectively. Details of the options fitted to an individual meter are provided on the instrument label.

The communication protocol used by the PM305 is a subset of Modicon's Modbus enabling use of standard host protocols and connection to standard controllers.

7.2 Communication Address

Each meter on a Modbus serial communication network must be assigned a unique address between 1 and 247. This is carried out in programming mode as described in Section 6.16. If two or more meters, connected to a multi-drop network have the same address, data on the network will be corrupted and communication will fail.

7.3 Data Format

The meter uses a fixed data format for serial communications :

1 Start Bit	8 Data Bits	1 Stop Bit
--------------------	--------------------	-------------------

The 8 data bits are always transmitted least significant bit first. This data byte is binary coded.

The baud rate is programmable as **2400, 4800, 9600, or 19200 baud**. This is carried out in programming mode as described in Section 6.17.

Communications

7.4 Isolated DC Power Supply

The serial communication output of the PM305 is isolated from all other circuits in the meter. An external d.c. source is required to provide power to the isolated circuit. The isolated supply may be connected to one or more meters (pin 11 -ve, pin 10 +ve) and should be rated 12V @ 30mA for each meter connected.

The negative (0V) terminal of the supply is internally connected to signal ground of the meter's communication port.

7.5 RS232

RS232 allows connection of a single meter to a standard serial communication port of a host computer. This method of connection is reliable for distances up to 5 metres at 19,200 baud. For longer distances it may be necessary to reduce communication speed.

7.5.1 RS232 Connection

It is recommended that screened cable is used with the screen grounded to the connector housing at the host only. The following table shows pin-out details for PC. compatibles with either 9 or 25 pin ports.

RS232 (At PM305)	METER PIN NO.	9 PIN D-TYPE (On Standard PC)	25 PIN D-TYPE (On Standard PC)
Receive	9	3 (Tx)	2 (Tx)
Transmit	8	2 (Rx)	3 (Rx)
Supply +	10	N/C	N/C
0V	11	5 (0V)	7 (0V)

N/C = No Connection on D-Type

Table 7-1 RS232 Interface Pin-Out

7.6 RS485

The RS485 communication option enables connection of up to 32 meters on a single pair of wires (bus). The pair is used for transmission and reception with each meter (and the host) automatically switching data direction. The host should be fitted with an RS485 driver (or converter) capable of operation in two wire mode. Each serial transaction is preceded by a meter address allowing the host to temporarily connect with any meter on the bus. Certain commands allow the host to transmit commands or data to all meters simultaneously. These commands are known as **broadcasts** and use address 0. The RS485 standard enables reliable communication over a maximum distance of 1200 metres. Standard line repeaters may be installed to increase the maximum distance of an RS485 network and/or the number of meters which may be connected.

7.6.1 RS485 Connection

It is recommended that screened 2 x twisted-pair cable is used for RS485 connection in order to minimise signal errors due to noise. The screen should be connected to the connector housing (ground) at the host only. To reduce cable reflections over long distances, RS422/485 systems require line termination. This is achieved by fitting two 120Ω terminating resistors as shown in Figure 7.1. One resistor should be fitted at the Host receive input buffer and the other at the receive buffer of the most remote meter.

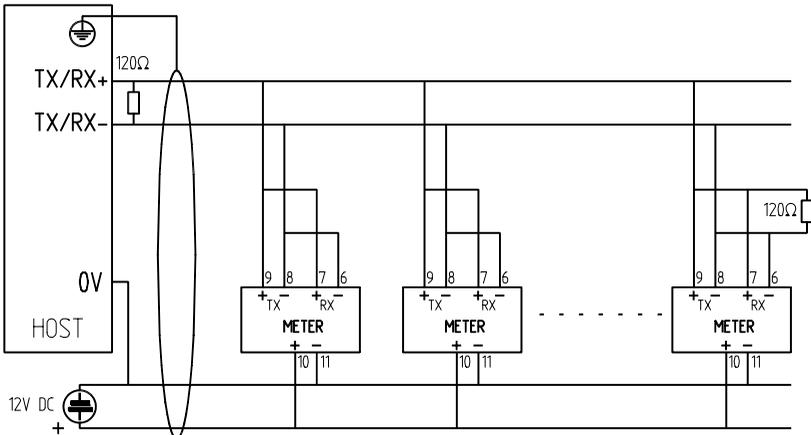


Figure 7.1 RS485 Multi-Drop Connection

Communications

7.7 RS422

The RS422 communication option enables connection of up to 32 meters on two pairs of wires (4-wire bus). One pair is used for transmission and the other for reception.

This connection is more commonly used in full duplex communications systems where host and slave can simultaneously transmit/receive data. In this instance however, the Modbus protocol itself ensures half duplex operation by default.

RS422 may be used in systems where the host is not capable of operation in RS485 mode. The RS422 standard enables reliable communication over a maximum distance of 1200 metres.

Standard line repeaters may be installed to increase the maximum distance of an RS422 network and/or the number of meters which may be connected.

7.7.1 RS422 Connection

It is recommended that screened 3 x twisted pair cable is used for RS422 connection in order to minimise signal errors due to noise. The screen should be connected to the connector housing (ground) at the host only. To reduce cable reflections over long distances, RS422/485 systems require line termination. This is achieved by fitting two 120Ω terminating resistors as shown in Figure 7.2. One resistor should be fitted at the Host receive input buffer and the other at the receive buffer of the most remote meter.

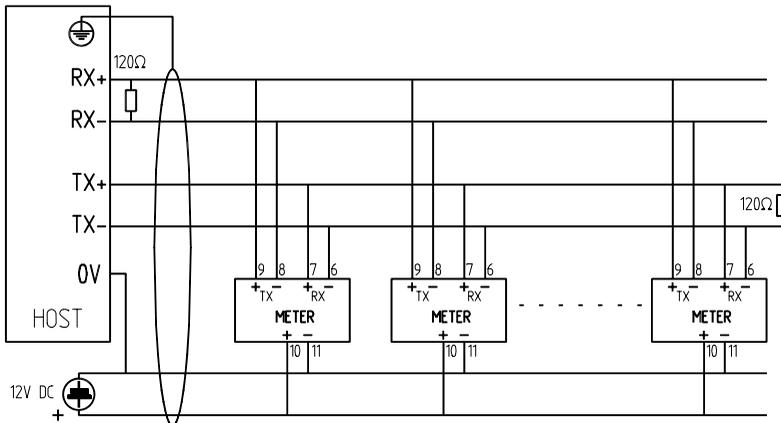


Figure 7.2 RS422 Multi-Drop Connection

7.8 Communication Protocol

7.8.1 An Introduction To Modbus

A communication protocol defines a set of commands and data formats which will be recognised by all compatible equipment connected on a system. The protocol effectively forms a communication language.

The PM305 meters utilise a subset of Modicon's 'Modbus' standard protocol. This protocol was originally developed for use by programmable logic controllers (PLCs). It defines a set of commands for reading and/or writing data to devices connected on the bus.

Modbus is a master-slave protocol with all transactions initiated by a single host (e.g. a PC). A single transaction commences with the host transmission of a command packet followed by a slave (meter) reply within 250ms of the end of the transmitted message.

Command packets consist of an address, a command identifier, data and a checksum for error detection. Each slave device continually monitors the bus looking for activity. Command packets are detected by all slaves but may be acted upon only by the device whose address matches that transmitted.

The host may transmit a **broadcast command** which uses address 0 to contact all devices on the network. In this instance the command is acted upon by all slaves but none of them may reply. This type of command may be useful, for example, in synchronising energy register reset on all meters.

The full Modbus protocol consists of many commands and modes of operation to suit a variety of controllers and applications. The PM305 utilises only a few commands and a single transmission mode to perform many functions specific to metering.

7.8.2 RTU. Transmission Mode

The RTU (Remote Terminal Unit) mode is utilised by the PM305 because it provides the most efficient throughput of data at any particular baud rate. In RTU mode, the start and end of each message is marked by a silent period of at least 3.5 character periods (Approx. 3.5ms @ 9600 baud). This is shown in the RTU message frame in Figure 7.3 below.

START	ADDRESS	FUNCTION	DATA	CRC	END
SILENT PERIOD	8 BITS	8 BITS	$n \times 8$ BITS	16 BITS	SILENT PERIOD

Figure 7.3 RTU Framing

The host (PC) initiates all transactions. Slave meters continuously monitor the network, looking for messages framed by silent periods. The first character detected, after a silent period, is assumed to be an address byte and is compared to the meters internal address (zero for broadcasts). An addressed slave reads the remainder of the message and acts upon it as required. A slave tests the message to determine its validity and uses the transmitted checksum (CRC) to detect communication errors. A slave will only reply to valid messages, received without error, specifically addressed to itself.

ADDRESS

Valid Modbus addresses are in the range 0-247. Individual meters may be assigned addresses in the range 1-247. Address 0 is retained for broadcast commands which are handled by all slaves. When a slave responds to a command it places its own address in the reply message.

FUNCTION

The function code is a single byte telling the meter what type of operation to perform. Valid Modbus codes are in the range 1-255 decimal but the PM305 handles only a small subset of these as summarised below.

Function code	Operation	Broadcast
04	Read Multiple Registers	No
06	Preset A Single Register	Yes
08	Loop Back Diagnostic	No
16	Preset Multiple Registers	Yes

Figure 7.4 Function Code Summary

DATA FIELD

Data from the host contains additional information for the meter specific to the command. For example the data field may specify which meter readings are required or new values for energy registers.

Data from a slave may contain meter readings or other information requested by the host. The slave also uses the data field to transmit error codes (**exceptions**). The size of the data field varies depending on command type and usage. The data format may also vary from one command to another to suit the application. Instantaneous readings for example are transmitted as IEEE floating point numbers, whereas energy readings are formatted as 4-byte long integers. Data is always transmitted with the most significant byte first. Data formatting is described in more detail in the following sections.

CRC ERROR CHECKING

A 16 bit CRC (*Cyclic Redundancy Check*) field is tagged on to the end of all messages. This field is the result of a CRC calculation performed on the message contents. The CRC field is used by the host and receiving devices alike to determine the validity of the entire message string. A receiving device recalculates the CRC and compares it to the value contained in the message. A slave device ignores a message if the two values do not match.

Note

Use of the CRC is essential when communicating in noisy environments to reduce the effects of erroneous bit errors. The meter will not reply to commands with a CRC in error and the host should re-transmit the command after a pre-determined time-out period. If the host receives a string with a CRC in error the transaction should be re-initiated.

The CRC is calculated on all bytes of a message from the address to the last data byte inclusively. Each bit of the message is processed through the CRC calculation starting with the first bit of the address. The Modbus standard method of CRC calculation requires reversal of the data bytes as they are fed serially through the bit processing routines. A simpler method involves swapping the low and high order bytes of the CRC integer at the end of the calculation. This is shown in the following routine.

Communications

The calculation is performed as follows :

1. Load a 16 Bit register ("CRC Register") with FFFF Hex. (All 1's).
2. Exclusive-OR the first 8 Bits of the message with the low-order byte of the CRC register. Put the result in the CRC register.
3. Shift the CRC register one bit to the right (divide by 2), filling the MSB with a zero.
4. If the bit shifted out in 3 is a 1, Exclusive-OR the CRC register with the value A001 Hex.
5. Repeat steps 3 and 4 until 8 shifts have been performed and the bits tested. A single byte has thus been processed.
6. Repeat steps 2 to 5 using the next 8 bit byte of the message until all bytes have been processed.
7. The final contents of the CRC register is tagged on to the end of the message with the most significant byte first.
8. Swap the low and high order bytes of the integer result

An implementation of the CRC calculation in C code is shown below :

```
unsigned int check_sum(unsigned char *buff, char start, char bytes)
{
    char byte_cnt,bit_cnt;          /* loop counters */
    unsigned int crc_reg;          /* Result register */
    unsigned int CRCHi, CRCLO; /*Low and high order bytes of the crc*/

    crc_reg = 0xFFFF;             /* Set the CRC register to all 1's */

    /* Repeat for each byte of sub string */
    for(byte_cnt=start; byte_cnt<(bytes+start); byte_cnt++)
    {
        crc_reg = crc_reg ^ (unsigned int)buff[byte_cnt]; /*EXOR CRC & Next Byte*/

        /* Test each bit of the CRC */
        for(bit_cnt=0; bit_cnt<8; bit_cnt++)
        {
            if(crc_reg & 0x0001)
            {
                crc_reg = crc_reg >> 1;          /* IF LSB=1 EXOR CRC with A001H */
                crc_reg = crc_reg ^ 0xA001; /* Then shift CRC toward LSB */
            }
            else crc_reg = crc_reg >> 1; /* ELSE Shift CRC towards LSB */
        }
    }
    CRCLo=crc_reg>>8; /*Swap the low and high order bytes of the crc result*/
    CRCHi=crc_reg<<8;
    crc_reg = CRCLo+CRCHi;
    return crc_reg;                /* Final CRC register Result */
}
```

7.9 Data Tables

Data in the PM305 is arranged in several tables for convenience. Individual tables contain like information. Table data may be read only (eg. Instantaneous readings) or read/write access (eg. CT primary).

Data in each table is addressed in a Modbus command by two consecutive bytes. The first byte defines the table number and the second byte the offset of the data in the table. For example, 'address 2 , 1' would access Table 2, Entry 1 (3-Phase kWh). The Modbus standard defines data addresses using an integer. In the case of the PM305 the high byte of this integer is represented by the table number and the low byte by the offset. A Modbus integer address may be calculated as :

$$\text{Modbus Data Address} = (256 \times \text{Table No}) + \text{Table Offset}$$

The format of data in a table is defined to suit the type of information it holds. Table 1 for example uses floating point registers to hold instantaneous meter readings.

INTEGERS (Int)

Integers are 16 bit values transmitted as two 8 bit bytes. The most significant byte is always transmitted first. These values vary in the range -32767 to +32767 although some registers have a limited range of acceptable values. The most significant bit defines the sign, zero indicating positive.

LONG INTEGERS (Long Int)

Long Integers are 32 bit values transmitted as four 8-bit bytes. The most significant byte is always transmitted first. These values are limited to the range 0 to 9999999 for the PM305.

FLOATING POINT (Float)

Floating Point numbers are 32 bit values transmitted as four 8-bit bytes following the IEEE standard for floating point values. The most significant byte is always transmitted first. These values are limited to the range $\pm 8.43 \times 10^{-37}$ to $\pm 3.38 \times 10^{38}$ but certain parameters are limited by the meter to a narrower range (eg CT primary 0.1 to 5000.0).

Communications

Table 1 Instantaneous Meter Readings

Offset	Address	Contents	Format	Bytes	Words	Access
0	256	kW 3-Ph	Float	4	2	R
1	257	kVA 3-Ph	Float	4	2	R
2	258	kvar 3-Ph	Float	4	2	R
3	259	PF 3-Ph	Float	4	2	R
4	260	Frequency	Float	4	2	R
5	261	Phase 1 Volts	Float	4	2	R
6	262	Phase 1 Current	Float	4	2	R
7	263	Phase 1 kW	Float	4	2	R
8	264	Phase 2 Volts	Float	4	2	R
9	265	Phase 2 Current	Float	4	2	R
10	266	Phase 2 kW	Float	4	2	R
11	267	Phase 3 Volts	Float	4	2	R
12	268	Phase 3 Current	Float	4	2	R
13	269	Phase 3 kW	Float	4	2	R
14	270	Phase 1 PF	Float	4	2	R
15	271	Phase 2 PF	Float	4	2	R
16	272	Phase 3 PF	Float	4	2	R
17	273	Ph1-Ph2 Volts	Float	4	2	R
18	274	Ph2-Ph3 Volts	Float	4	2	R
19	275	Ph3-Ph1 Volts	Float	4	2	R
20	276	Phase 1 kVA	Float	4	2	R
21	277	Phase 2 kVA	Float	4	2	R
22	278	Phase 3 kVA	Float	4	2	R
23	279	Phase 1 kvar	Float	4	2	R
24	280	Phase 2 kvar	Float	4	2	R
25	281	Phase 3 kvar	Float	4	2	R

All values are stored as floating point numbers in unit form (watts, volts, amps etc.).

Table 2 Energy Registers

Offset	Address	Contents	Format	Bytes	Words	Access
0	512	Decimal Point ❶	Long Int	4	2	R
1	513	3-Ph Wh	Long Int	4	2	R / W
2	514	3-Ph VAh	Long Int	4	2	R / W
3	515	3-Ph varh (Ind)	Long Int	4	2	R / W
4	516	3-Ph varh (Cap)	Long Int	4	2	R / W
5	517	Export Wh	Long Int	4	2	R / W
6	518	Export VAh	Long Int	4	2	R / W
7	519	Accum VA MD.	Long Int	4	2	R / W
8	520	Peak VA MD.	Long Int	4	2	R / W
9	521	Accum W MD.	Long Int	4	2	R / W
10	522	Peak W MD.	Long Int	4	2	R / W

The values in Table 2 represent the energy registers of the meter. They are stored as long integers representing the numbers displayed by the meter without a decimal point or scaling.

The Decimal Point Register ❶ defines the scaling for all registers in the table. The value is defined, automatically by the meter, dependant on the current and voltage transformer values currently set. This value is read only and may not be changed directly using serial communications.

An actual unit energy reading (eg. wh) is calculated as :

$$N \times 10^{(DP-2)}$$

N = Register value stored in the table

DP = The Decimal Point Register

Example : A number displayed on the lcd as 123.45 kWh (i.e. LSB = 10 wh) would be stored in the table as 12345. The Decimal Point Register would be set to 3. The energy value would be calculated as $12345 \times 10^{(3-2)} = 123450$ wh.

Communications

Table 3 Meter Set-up

Offset	Address	Contents	Format	Bytes	Words	Access
0	768	CT Primary	Float	4	2	R / W
1	769	PT Ratio	Float	4	2	R / W
2	770	Nominal Volts	Float	4	2	R / W

The values in Table 3 represent the basic meter set-up and are stored as floating point numbers.

NOTE : The value in the Nominal Volts register is factory set and does not require alteration by the user under normal circumstances.

Table 4 Relay Set-up

Offset	Address	Contents	Format	Bytes	Words	Access
0	1024	Relay 1 Type	Integer	2	1	R / W
1	1025	Relay 1 Direction	Integer	2	1	R / W
2	1026	Relay 1 Set Point	Integer	2	1	R / W
3	1027	Relay 1 Rate	Integer	2	1	R / W
4	1028	Relay 1 Delay	Integer	2	1	R / W
5	1029	Relay 2 Type	Integer	2	1	R / W
6	1030	Relay 2 Direction	Integer	2	1	R / W
7	1031	Relay 2 Set Point	Integer	2	1	R / W
8	1032	Relay 2 Rate	Integer	2	1	R / W
9	1033	Relay 2 Delay	Integer	2	1	R / W

The values in Table 4 represent the set-up parameters of the meters internal pulsing/alarm relays and are stored as integers. The values are used to define the relay operation as shown below.

RELAY TYPE

Defines the function of the relay as follows :

TYPE = 0	Relay Not Fitted
TYPE = 1	kWh Pulsing
TYPE = 2	kVAh Pulsing
TYPE = 3	kvarh (Ind) Pulsing
TYPE = 4	kvarh (Cap) Pulsing
TYPE = 5	Export kWh Pulsing
TYPE = 6	Export kVAh Pulsing
TYPE = 101	kW Alarm
TYPE = 102	kVA Alarm
TYPE = 103	kvar Alarm
TYPE = 104	Average Voltage Alarm
TYPE = 105	Average Current Alarm
TYPE = 106	Power Factor Alarm (x100)
TYPE = 107	Frequency Alarm (x100)
TYPE = 108	kW Maximum Demand Alarm
TYPE = 109	kVA Maximum Demand Alarm

The most significant byte of this integer parameter should always be set to 0.

RELAY DIRECTION

This is used for alarm relays only (Types 101 to 109) and defines whether the alarm is activated when the measured value is under or over the preset alarm level.

DIRECTION = 0	Under Alarm
DIRECTION = 1	Over Alarm

RELAY SET POINT

This is used for alarm relays only (Types 101 to 109) and defines the point at which the relay is activated. The value in this register defines the set point as a percentage of full scale of the preset parameter. The range of values accepted for the majority of parameters is ± 120 corresponding to set points of $\pm 120\%$.

If the Relay Type is set to power factor (106) the Relay Set Point table entry varies over the range 0-100 corresponding to power factors of 0.00 to 1.00.

If the Relay Type is set to frequency (107) the Relay Set Point table entry varies over the range 4500-6500 corresponding to frequencies of 45.00 to 65.00 hz.

RELAY RATE

This is used for pulsing relays only and defines the number of counts of the associated energy register, as displayed, which will occur between each relay pulse operation. The range of values accepted by the meter are 1 to 10,000.

RELAY DELAY

For pulsing relays this register defines the pulse ON period, for each relay closure, in the range 100ms - 5000ms. For alarm relays this register defines the alarm delay period (ref section 6.9) in the range 0 to 10 seconds.

Communications

EXAMPLE :

A meter has a current transformer primary of 100.0A and Relay 1 programmed via the serial communication port as :

TYPE	DIRECTION	SET POINT	RATE	DELAY
105	1	60	10	5

Relay 1 will close when the average of the 3-phase currents exceeds 60% of 100.0 Amps (60A) for longer than 5 seconds. The operation of pulsing/alarm outputs is covered in detail in section 6.9.

Table 5 Analogue Output Set-up

Offset	Address	Contents	Format	Bytes	Words	Access
0	1280	Output 1 Type	Integer	2	1	R / W
1	1281	Output 1 Range	Integer	2	1	R / W
2	1282	Output 1 % FS	Integer	2	1	R / W
3	1283	Output 2 Type	Integer	2	1	R / W
4	1284	Output 2 Range	Integer	2	1	R / W
5	1285	Output 2 % FS	Integer	2	1	R / W

The values in Table 5 represent the set-up parameters of the meters optional analogue output channels and are stored as integers. The values are used to define the outputs as shown below.

OUTPUT TYPE

Defines the function of the output as follows :

TYPE = 0	Output Not Fitted
TYPE = 1	3-Phase Power Factor
TYPE = 2	Frequency (Phase 1 Volts)
TYPE = 3	3-Phase kW
TYPE = 4	3-Phase kVA
TYPE = 5	3-Phase kvar
TYPE = 6	Average 3-Phase Voltage
TYPE = 7	Average 3-Phase Current
TYPE = 8	Phase 1 Voltage
TYPE = 9	Phase 2 Voltage
TYPE = 10	Phase 3 Voltage
TYPE = 11	Phase 1 Current
TYPE = 12	Phase 2 Current
TYPE = 13	Phase 3 Current
TYPE = 14	kW Accumulating MD
TYPE = 15	kVA Accumulating MD

The most significant byte of this integer parameter should always be set to 0.

OUTPUT RANGE

This defines the output signal range (section 6.11) as :

RANGE = 0	Unipolar Input Range
RANGE = 1	Bipolar Input Range
RANGE = 2	Absolute Input Range

OUTPUT % FULL SCALE (FS)

This defines the level of measured signal which will provide 20mA (or 16mA) at the analogue output. The value is defined as a percentage of the full scale of the parameter programmed.

The range of values accepted by the meter are 500 to 2000 corresponding to set points of 50.0% to 200.0% of the full scale. The most significant byte is therefore always set to 0.

EXAMPLE :

A meter has a current transformer primary of 100.0A and an analogue output channel 1 programmed via the serial communication port as :

TYPE	RANGE	% FULL SCALE
11	0	75.0 (set point= 750)

The analogue output channel will provide 4-20mA (or 0-16mA) representing phase 1 current in the range 0-75 Amps.

The operation of analogue outputs is covered in detail in section 5.

Table 6 Real Time Clock

Offset	Address	Contents	Format	Bytes	Words	Access
0	1536	Date	Integer	2	1	R / W
1	1537	Month	Integer	2	1	R / W
2	1538	Year	Integer	2	1	R / W
3	1539	Hour	Integer	2	1	R / W
4	1540	Minute	Integer	2	1	R / W
5	1541	Second	Integer	2	1	R / W
6	1542	MD Period	Integer	2	1	R / W

The values in Table 6 represent the current Date/Time of the real time clock internal to the meter. A 24hr clock format is used.

Communications

EXAMPLE :

The real time clock in a meter requires setting to 11:30 pm, the 21st of November 1995 via the communication port. The following values would be transmitted from the host :

DATE	MONTH	YEAR	HOUR	MINUTE	SECONDS
21	11	95	23	30	00

The MD Period register defines the number of minutes in each MD period. Valid values are 5, 10, 15, 20, and 30 minutes.

Table 7 Meter Description

Offset	Address	Contents	Format	Bytes	Words	Access
0	1792	Meter Type	Integer	2	1	R
1	1793	Serial Number	Integer	2	1	R
2	1794	Software Version	Integer	2	1	R

The values in Table 7 provide details of the meter type as described in section 2.2.

Serial numbers are integer values in the range 1 to 65000.

The software version is stored as an integer without decimal point so Version 2.10 would be stored as 210.

These values are factory set and may not be changed via the serial communication option.

Table 8 Communication Set-up

Offset	Address	Contents	Format	Bytes	Words	Access
0	2048	Access Code	Integer	2	1	R/W
1	2049	Meter Address	Integer	2	1	R/W
2	2050	Baud Rate	Integer	2	1	R/W
3	2051	Balanced Volts	Integer	2	1	R/W
4	2052	Auto-Rotate	Integer	2	1	R/W

The values in Table 8 provide details of the software configuration of the serial communication option. Care must be taken in making changes to these values as they may affect subsequent communications.

ACCESS CODE

A value of 12345 must be set for the Access Code before any other byte in Table 8 may be written to. This prevents accidental access to the data in the table which may cause communications problems. This register is reset to 0 on each power up of the meter.

METER ADDRESS

This is the Modbus unique address for the meter and may be set in the range 0-250 using the communications port. All Modbus transactions subsequent to the one setting the address must use the new value.

Address 0 is a special address **reserved** for factory use only and should never be set by the user.

Address 1-247 are valid Modbus addresses but should be unique on a Modbus system.

Address 248-250 have the effect of disabling the Programming Menu selections specific to communications (Baud Rate and Address). A value of 250 is factory set in meters with no communications hardware fitted.

BAUD RATE

Valid Baud Rates are 2400, 4800, 9600 and 19200. All Modbus transactions subsequent to the one setting the baud rate are carried out at the new speed.

BALANCED VOLTS

This defines whether balanced voltage mode (refer to section 2.10) is **OFF (0)** or **ON (1)**.

AUTO-ROTATE

This defines whether CT Auto Rotate mode (refer to section 2.9) is **OFF (0)** or **ON (1)**.

Communications

7.10 RTU Commands

7.10.1 Function 04 Read Multiple Registers

Description

This function allows a number of registers from a meter table to be read in a single operation. This command is commonly used to obtain instantaneous, energy or setup data from the meter. This command is not available as a *broadcast* command as it requires a return data packet from the meter.

Host Request

	BYTE	EXAMPLE
METER ADDRESS	1	19 H
FUNCTION	2	04 H
TABLE NUMBER (Address High Byte)	3	01 H
TABLE OFFSET (Address Low Byte)	4	05 H
No. OF WORDS (N) (High Byte)	5	00 H
No. OF WORDS (N) (Low Byte)	6	06 H
CHECKSUM (High Byte)	7	62 H
CHECKSUM (Low Byte)	8	2D H

Meter Response

	BYTE	EXAMPLE
METER ADDRESS	1	19 H
FUNCTION	2	04 H
NUMBER OF BYTES (2N)	3	0C H
DATA REGISTER 1 (High Byte)	4	V1 (float) MSB
DATA REGISTER 1 (Low Byte)	5	V1 Byte 3
DATA REGISTER 2 (High Byte)	6	V1 Byte 2
DATA REGISTER 2 (Low Byte)	7	V1 LSB
DATA REGISTER N (High Byte)	2N + 2	kW1 Byte 2
DATA REGISTER N (Low Byte)	2N + 3	kW1 LSB
CHECKSUM (High Byte)	2N + 4	CRC MSB ❶
CHECKSUM (Low Byte)	2N + 5	CRC LSB ❶

The example shows a host request for data from Table 1 Instantaneous Meter Readings. The data requested starts at Phase 1 Voltage (Offset=5) and is for 6 Words (3 floats). The meter returns Phase 1 Volts, Phase 1 Current and Phase 1 kW as floating point numbers. The meter therefore returns a Byte Count of 12.

❶ The checksum received from the meter is dependant on the data transmitted.

7.10.2 Function 06 Preset a Single Register

Description

This function allows a single integer register in a meter table to be changed by the host. This command is commonly used to program meter parameters or to reset energy registers to zero.

When broadcast (address=0) all meters on the network are addressed together but none reply.

Host Request

	BYTE	EXAMPLE
METER ADDRESS	1	19 H
FUNCTION	2	06 H
TABLE NUMBER (Address High Byte)	3	02 H
TABLE OFFSET (Address Low Byte)	4	01 H
DATA VALUE (High Byte)	5	C3 H
DATA VALUE (Low Byte)	6	50 H
CHECKSUM (High Byte)	7	8A H
CHECKSUM (Low Byte)	8	A6 H

Meter Response

	BYTE	EXAMPLE
METER ADDRESS	1	19 H
FUNCTION	2	06 H
TABLE NUMBER (Address High Byte)	3	02 H
TABLE OFFSET (Address Low Byte)	4	01 H
DATA VALUE (High Byte)	5	C3 H
DATA VALUE (Low Byte)	6	50 H
CHECKSUM (High Byte)	7	8A H
CHECKSUM (Low Byte)	8	A6 H

The example shows a host request to set the kWh energy register (Table 2, Offset 1) to 50,000 (C3 50 Hex).

The meter responds with a repeat of the host message after the register has been successfully written.

NOTE : This Modbus command is limited to writing 2-byte data only. It may not be used to set floating point values (eg CT primary). Long Integer registers may be written as in the example above where the upper bytes are automatically set to zero by the meter.

Communications

7.10.3 Function 08 Loop Back Diagnostic

Description

This function provides a simple means of testing the communication network and detecting if a particular meter is present..

This command is not available as a *broadcast* command as it requires a return data packet from the meter.

Host Request

	BYTE	EXAMPLE
METER ADDRESS	1	19 H
FUNCTION	2	08 H
DIAGNOSTIC CODE (High Byte)	3	00 H
DIAGNOSTIC CODE (Low Byte)	4	00 H
DIAGNOSTIC DATA (High Byte)	5	03 H
DIAGNOSTIC DATA (Low Byte)	6	E8 H
CHECKSUM (High Byte)	7	E3 H
CHECKSUM (Low Byte)	8	6D H

Meter Response

	BYTE	EXAMPLE
METER ADDRESS	1	19 H
FUNCTION	2	08 H
DIAGNOSTIC CODE (High Byte)	3	00 H
DIAGNOSTIC CODE (Low Byte)	4	00 H
DIAGNOSTIC DATA (High Byte)	5	03 H
DIAGNOSTIC DATA (Low Byte)	6	E8 H
CHECKSUM (High Byte)	7	E3 H
CHECKSUM (Low Byte)	8	6D H

The example shows a loop back diagnostic with the test data set to 1000 (03 E8 Hex). The data byte is arbitrary.

NOTE : Modbus defines a number of diagnostic commands, each identified by a different code. The PM305 only supports Code=0 which returns the host command string as sent.

7.10.4 Function 16 Preset Multiple Registers

Description

This function allows a number of registers in a meter table to be set, by the host, in a single operation. This command is commonly used for setting energy registers or changing programmable setup parameters. When broadcast (address=0) all meters on the network are addressed together but none reply.

Host Request

	BYTE	EXAMPLE
METER ADDRESS	1	19 H
FUNCTION	2	10 H
TABLE NUMBER (Address High Byte)	3	03 H
TABLE OFFSET (Address Low Byte)	4	00 H
NUMBER OF DATA WORDS (N) (High Byte)	5	00 H
NUMBER OF DATA WORDS (N) (Low Byte)	6	04 H
NUMBER OF DATA BYTES (2N)	7	08 H
DATA BYTE 1	8	Float 1 MSB
DATA BYTE 2	9	Float 1 [2]
DATA BYTE 3	10	Float 1 [1]
DATA BYTE 4	11	Float 1 LSB
...
DATA BYTE 2N-1	2N + 6	00 H
DATA BYTE 2N	2N + 7	00 H
CHECKSUM (High Byte)	2N + 8	CRC MSB
CHECKSUM (Low Byte)	2N + 9	CRC LSB

Meter Response

	BYTE	EXAMPLE
METER ADDRESS	1	19 H
FUNCTION	2	10 H
TABLE NUMBER (Address High Byte)	3	02 H
TABLE OFFSET (Address Low Byte)	4	01 H
NUMBER OF DATA WORDS (High Byte)	5	00 H
NUMBER OF DATA WORDS (Low Byte)	6	06 H
CHECKSUM (High Byte)	7	13 H
CHECKSUM (Low Byte)	8	AB H

Communications

Command 16 may be used to preset Integers (words), Floats and Long integers equally. Floats and Long Integers are transmitted High byte first with the number of DATA WORDS (N) set to 2 x the number of registers.

The type of data sent is dependant on the Table selected. (eg Long Integer Data must be sent to preset values in Table 2).

The following example sets the CT primary current to 200.0 and the VT ratio to 1.0 in a single command using floating point data as required by Table 3.

Example Host Request

	BYTE	EXAMPLE
METER ADDRESS	1	19 H
FUNCTION	2	10 H
TABLE NUMBER (Address High Byte)	3	03 H
TABLE OFFSET (Address Low Byte)	4	00 H
NUMBER OF DATA WORDS (N) (High Byte)	5	00 H
NUMBER OF DATA WORDS (N) (Low Byte)	6	04 H
NUMBER OF DATA BYTES (2N)	7	08 H
CT Primary =200.0 - Byte 3 (MSB)	8	43 H
CT Primary =200.0 - Byte 2	9	48 H
CT Primary =200.0 - Byte 1	10	00 H
CT Primary =200.0 - Byte 0 (LSB)	11	00 H
VT Ratio = 1.0 - Byte 3 (MSB)	12	3F H
VT Ratio = 1.0 - Byte 2	13	80 H
VT Ratio = 1.0 - Byte 1	14	00 H
VT Ratio = 1.0 - Byte 0 (LSB)	15	00 H
CHECKSUM (High Byte)	16	2A H
CHECKSUM (Low Byte)	17	6E H

7.11 Exception Responses

When a host sends a query to an individual meter on the network it expects a normal response. In fact one of four possible events may occur as a result of the query :

- ◇ If the meter receives the message with no communication errors, and can handle the query it will reply with a normal response.
- ◇ If the meter does not receive the message due to a communication failure, no response will be returned and the host will eventually time-out.
- ◇ If the meter receives the message but detects a communication error via its CRC, no response will be returned and the host will eventually time-out.
- ◇ If the meter receives the query with no communication errors but cannot handle the query (out of range data or address) the response will be an **Exception Response** informing the host of the nature of the error.

An Exception Response differs from a normal response in its Function Code and Data Fields.

Exception Response

	BYTE	EXAMPLE
METER ADDRESS	1	19 H
FUNCTION	2	84 H
EXCEPTION CODE	3	02 H
CHECKSUM (High Byte)	4	42 H
CHECKSUM (Low Byte)	5	C6H

EXCEPTION FUNCTION CODE

All normal function types have a most significant bit of 0 (< 80 Hex). In an Exception Response the meter sets the MSB to 1 (adds 80H to the received Function Type). The Function can therefore be used by the host to detect an Exception Response.

DATA FIELD

In an Exception Response the data field is used only to return the type of error that occurred (**Exception Code**).

The PM305 Utilises the following Exception Codes :

CODE	MEANING
1	Function Code Not Supported By Meter
2	Table Number Or Offset Out Of Range Of Meter
3	Data Value Out Of Range

Specification

8. Specification

INPUT VOLTAGE	
Input Type.	3-Phase, 3/4 Wire
Nominal Volts (Un).	400V Line, 230V Phase (60V Ph Optional)
Operating Range.	50% to 120% Un
Maximum Overload.	2 x Un for 2 seconds
Voltage To Ground.	300V AC r.m.s. maximum
Maximum Burden.	350uA per phase
Frequency Range.	16-550Hz fundamental
Maximum Harmonic.	Up to 20 th of 50 Hz
INPUT CURRENT	
Input Type.	Current Transformers
Nominal Current (Ib).	5 Amp per phase. (1 Amp optional)
Operating Range.	0.5% to 120% Ib
Maximum Overload.	10 x Ib for 10 s; 40 x Ib for 1s
Voltage To Ground.	300V AC r.m.s. maximum
Maximum Burden.	0.1 VA per phase
Frequency Range.	16-550Hz fundamental
Maximum Harmonic.	Up to 20 th of 50 Hz
Starting Current.	Less than 0.2% Ib
Isolation.	2.5kV each phase.
AUXILIARY SUPPLY	
Input Type.	Single phase + earth 45-65Hz.
Nominal Voltage.	230V \pm 20% as standard
Options.	115V \pm 20%
Maximum Power.	6 Watts
Internal Fuse.	100mA Type T (delay)
Voltage to Ground.	300V AC r.m.s maximum
Isolation.	2.5kV
OUTPUT RELAYS	
Type.	2 x Bipolar Opto FETs
Usage.	Pulse output or alarm.
Contact Rating.	120VAC, 120mA AC/DC, 250 mA DC
Contact Bounce.	0.5ms maximum
Pulse Rate.	Programmable. (Maximum every 1.2 seconds)
Pulse Period.	Programmable 0.1 to 5 seconds.
Alarm Parameter.	Programmable (Displayed values only)
Alarm Set Point.	Programmable (Depends on parameter)
Isolation.	2.5kV (50V Output A to Output B)

DISPLAY	
Type. Display Format. Digit Height. Legend Height. Backlight.	Intelligent supertwist custom liquid crystal (LCD) 2 rows of 7 digits (7 segment) and legends 7mm each row 3.5mm Green/Yellow light emitting diode. (LED)
ACCURACY (45-65Hz)	
Test Conditions.	Using equipment traceable to national standards 23 °C Nominal ($\pm 4^{\circ}\text{C}$)
Instantaneous W. Instantaneous VA. Instantaneous Var. kWh Register. kVAh Register. kvarh Register. Instantaneous Volts. Instantaneous Amps. Instantaneous PF. Frequency.	Class 0.5 (see kWh) Class 1 (see kVAh) Class 1 (see kvarh) Class 0.5 (EN 61036) Class 1 Class 1 (EN 61268) Class 0.1 EN 60688 (5% U_n to 120% U_n) ± 1 digit Class 0.1 EN 60688 (5% I_b to 120% I_b) ± 1 digit ± 0.2 degrees. $\pm 0.002\text{Hz}$, ± 1 digit
GENERAL	
Temperature. Humidity. Memory. Environment. Safety. EMC	Operating -10°C to $+55^{\circ}\text{C}$, storage -25°C to $+70^{\circ}\text{C}$ Operating $<75\%$ Non Condensing 25 years in event of power failure IP55 When mounted in a panel EN 61010 (Installation category 3) EN 50081 : 1992 Part 1 EN 50082 : 1995 Part 2
MECHANICAL	
Dimensions. Material. Weight.	96 x 48 x 139mm Noryl GFN 2 SE 600g maximum

Specification

OPTIONAL COMMS	
Type.	RS422 or RS485 multidrop (RS232 alternative)
Data Format.	1 Start bit , 8 data bits, 1 Stop Bit.
Protocol.	Modbus. RTU framing, binary data with CRC
Baud Rate.	2400 to 19200 programmable.
Address Range.	1-247 programmable. (must be unique)
Number of Meters.	Up to 32 on standard RS422/RS485 Up to 247 with external line repeaters.
External Supply	9V(min) - 12V(nom) d.c. @ 30mA per meter.
Isolation	2.5kV

OPTIONAL ANALOGUE OUTPUT	
Type.	Isolated d.c. loop powered current output.
Output Current.	4-20mA or 0-16mA selectable
Input Range.	Programmed proportional to measured value..
Scaling.	Programmable 50-200% of input.
External Supply	18V(min), 24V(nom), 30V(max) d.c. @ 30mA d.c. per meter.
Isolation	2.5kV
Isolation Output A-B	50V
Response Time	2.0 seconds maximum (updated every second)
Loop Impedance	500Ω maximum (@ 24V)
Accuracy	±0.5% fs of displayed value or ±1.0% rdg of displayed value

Nominal Values And Measurement Ranges

PARAMETER	FULL SCALE	RANGE % F.S.
3-Ph kW	3 x Vnom x CT Prim x PT Ratio	-144% to +144%
Phase kW	Vnom x CT Prim x PT Ratio	-144% to +144%
3-Ph kVA	3 x Vnom x CT Prim x PT Ratio	-144% to +144%
Phase kVA	Vnom x CT Prim x PT Ratio	-144% to +144%
3-Phase kvar	3 x Vnom x CT Prim x PT Ratio	-144% to +144%
Phase kvar	Vnom x CT Prim x PT Ratio	-144% to +144%
Phase V	Vnom x PT Ratio	0% to +120%
Phase I	CT Primary	0% to +120%
Power Factor	1.00	-0.0 to 1.00 to +0.0
kWh	9 9 9 9 9 9 9	0 to 9999999
kVAh	9 9 9 9 9 9 9	0 to 9999999
kvarh (Ind)	9 9 9 9 9 9	0 to 999999
kvarh (Cap)	9 9 9 9 9 9	0 to 999999
Export kWh	- 9 9 9 9 9 9	-999999 to 0
Export kVAh	- 9 9 9 9 9 9	-999999 to 0

Table 8-1 Full Scale Values

Northern Design (Electronics) Ltd,
228 Bolton Road, Bradford,
West Yorkshire, BD3 0QW, England.
Telephone: +44 (0) 1274 729533
Fax: +44 (0) 1274 721074
Email: sales@ndmeter.co.uk
Or: support@ndmeter.co.uk
Copyright © Northern Design 2000

